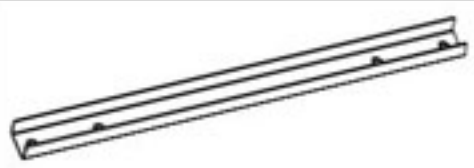
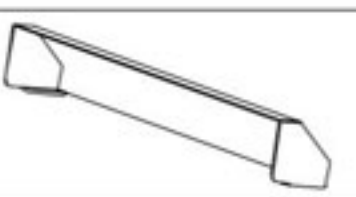
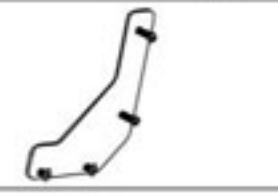
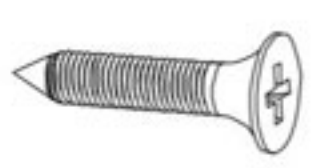



This instruction is fit for the following item numbers.

Name	Art.No.	T=Cabinet	Width*Depth*Height
Tandem pantry unit	CA-KTD	500 mm	400*530*(1259-1659)
Tandem pantry unit	CA-KTD	500 mm	400*530*(1659-2059)
Tandem pantry unit	CA-KTD	500 mm	400*530*(1959-2359)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1259-1659)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1659-2059)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1959-2359)
Tandem pantry unit	CA-KTD	500 mm	400*530*(1259-1659)
Tandem pantry unit	CA-KTD	500 mm	400*530*(1659-2059)
Tandem pantry unit	CA-KTD	500 mm	400*530*(1959-2359)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1259-1659)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1659-2059)
Tandem pantry unit	CA-KTD	600 mm	550*530*(1959-2359)


Description	Picture	Quantity
U-iron		1
L-shaped bracket		1
Connecting strip		2
Runner protective cover		2
Runner		1 Pair
L-shaped iron		2
ST3.5*12tapping screw		4
ST3.5*16tapping screw		8
ST3.5*25tapping screw		(Small basket amount*2)+4

Wood basdet		
Description	Picture	Quantity
Basket pothook		Basket amount*4


Step 1: As the size revealed in the picture below,drill 4 small holes $\phi 2.5\text{mm}$ respectively on top cabinet panel.

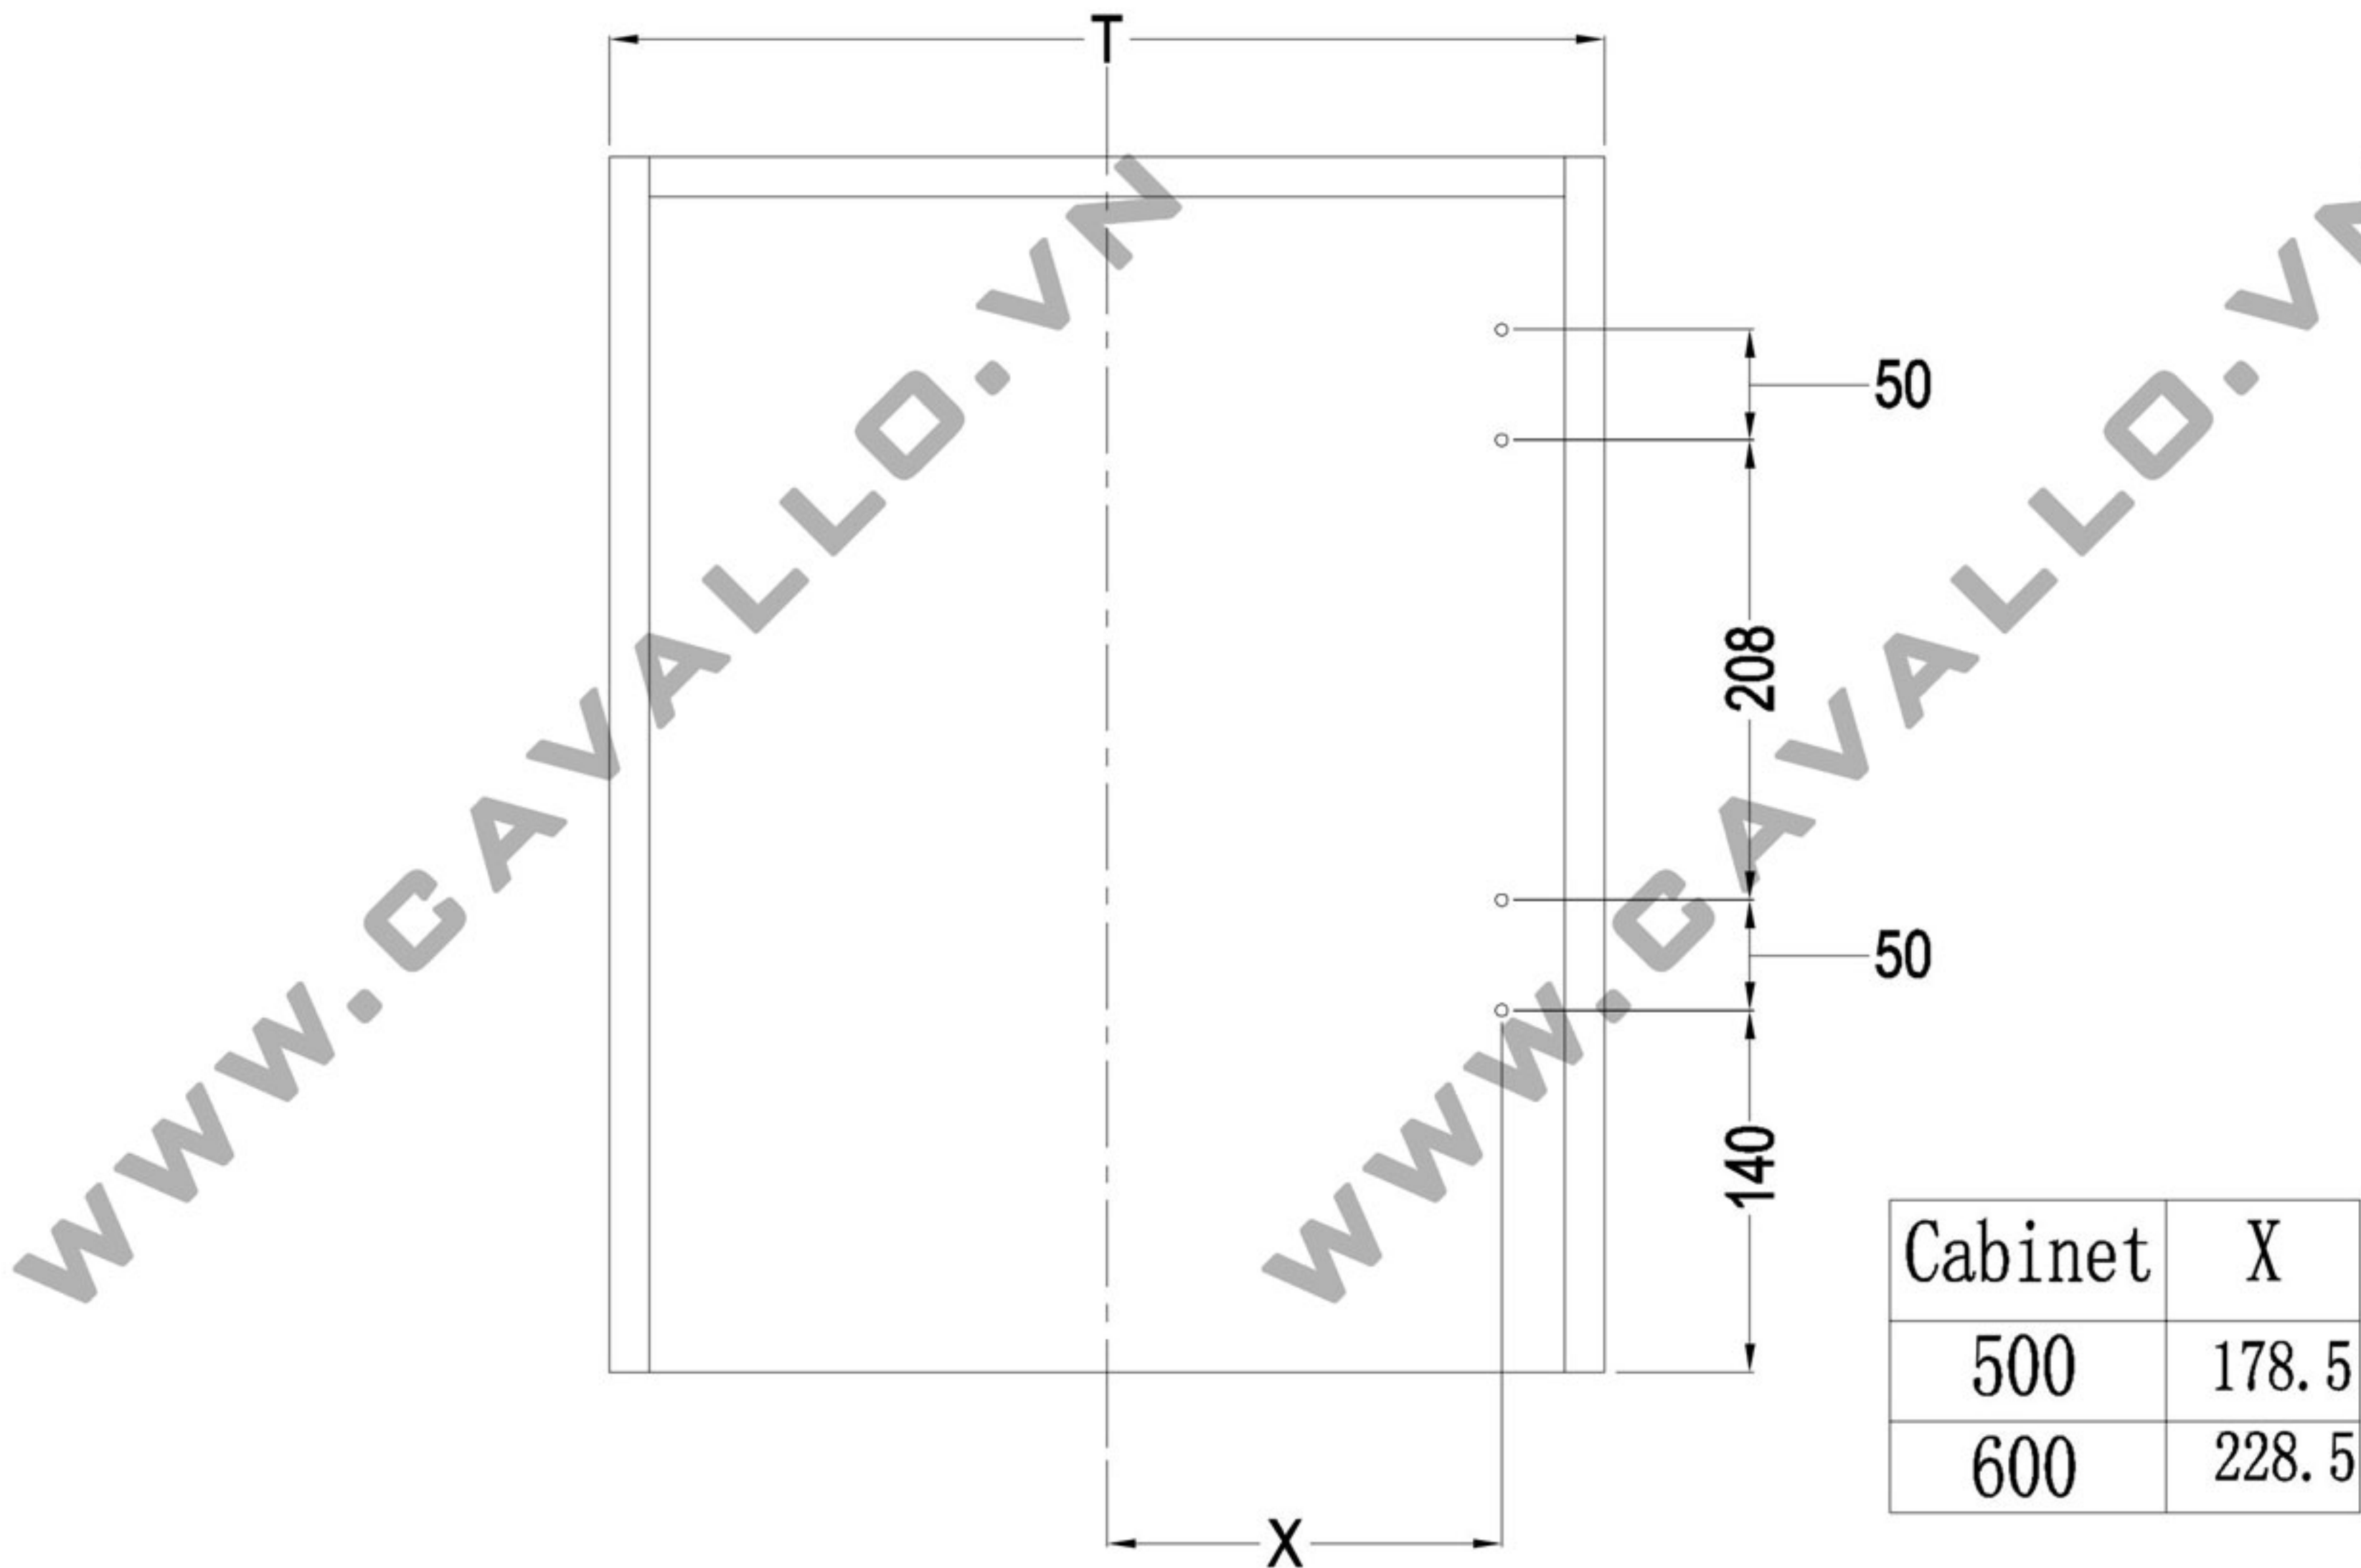

Step 2: As the size revealed in the picture below,drill 8 small holes $\phi 2.5\text{mm}$ respectively on and bottom cabinet panel.

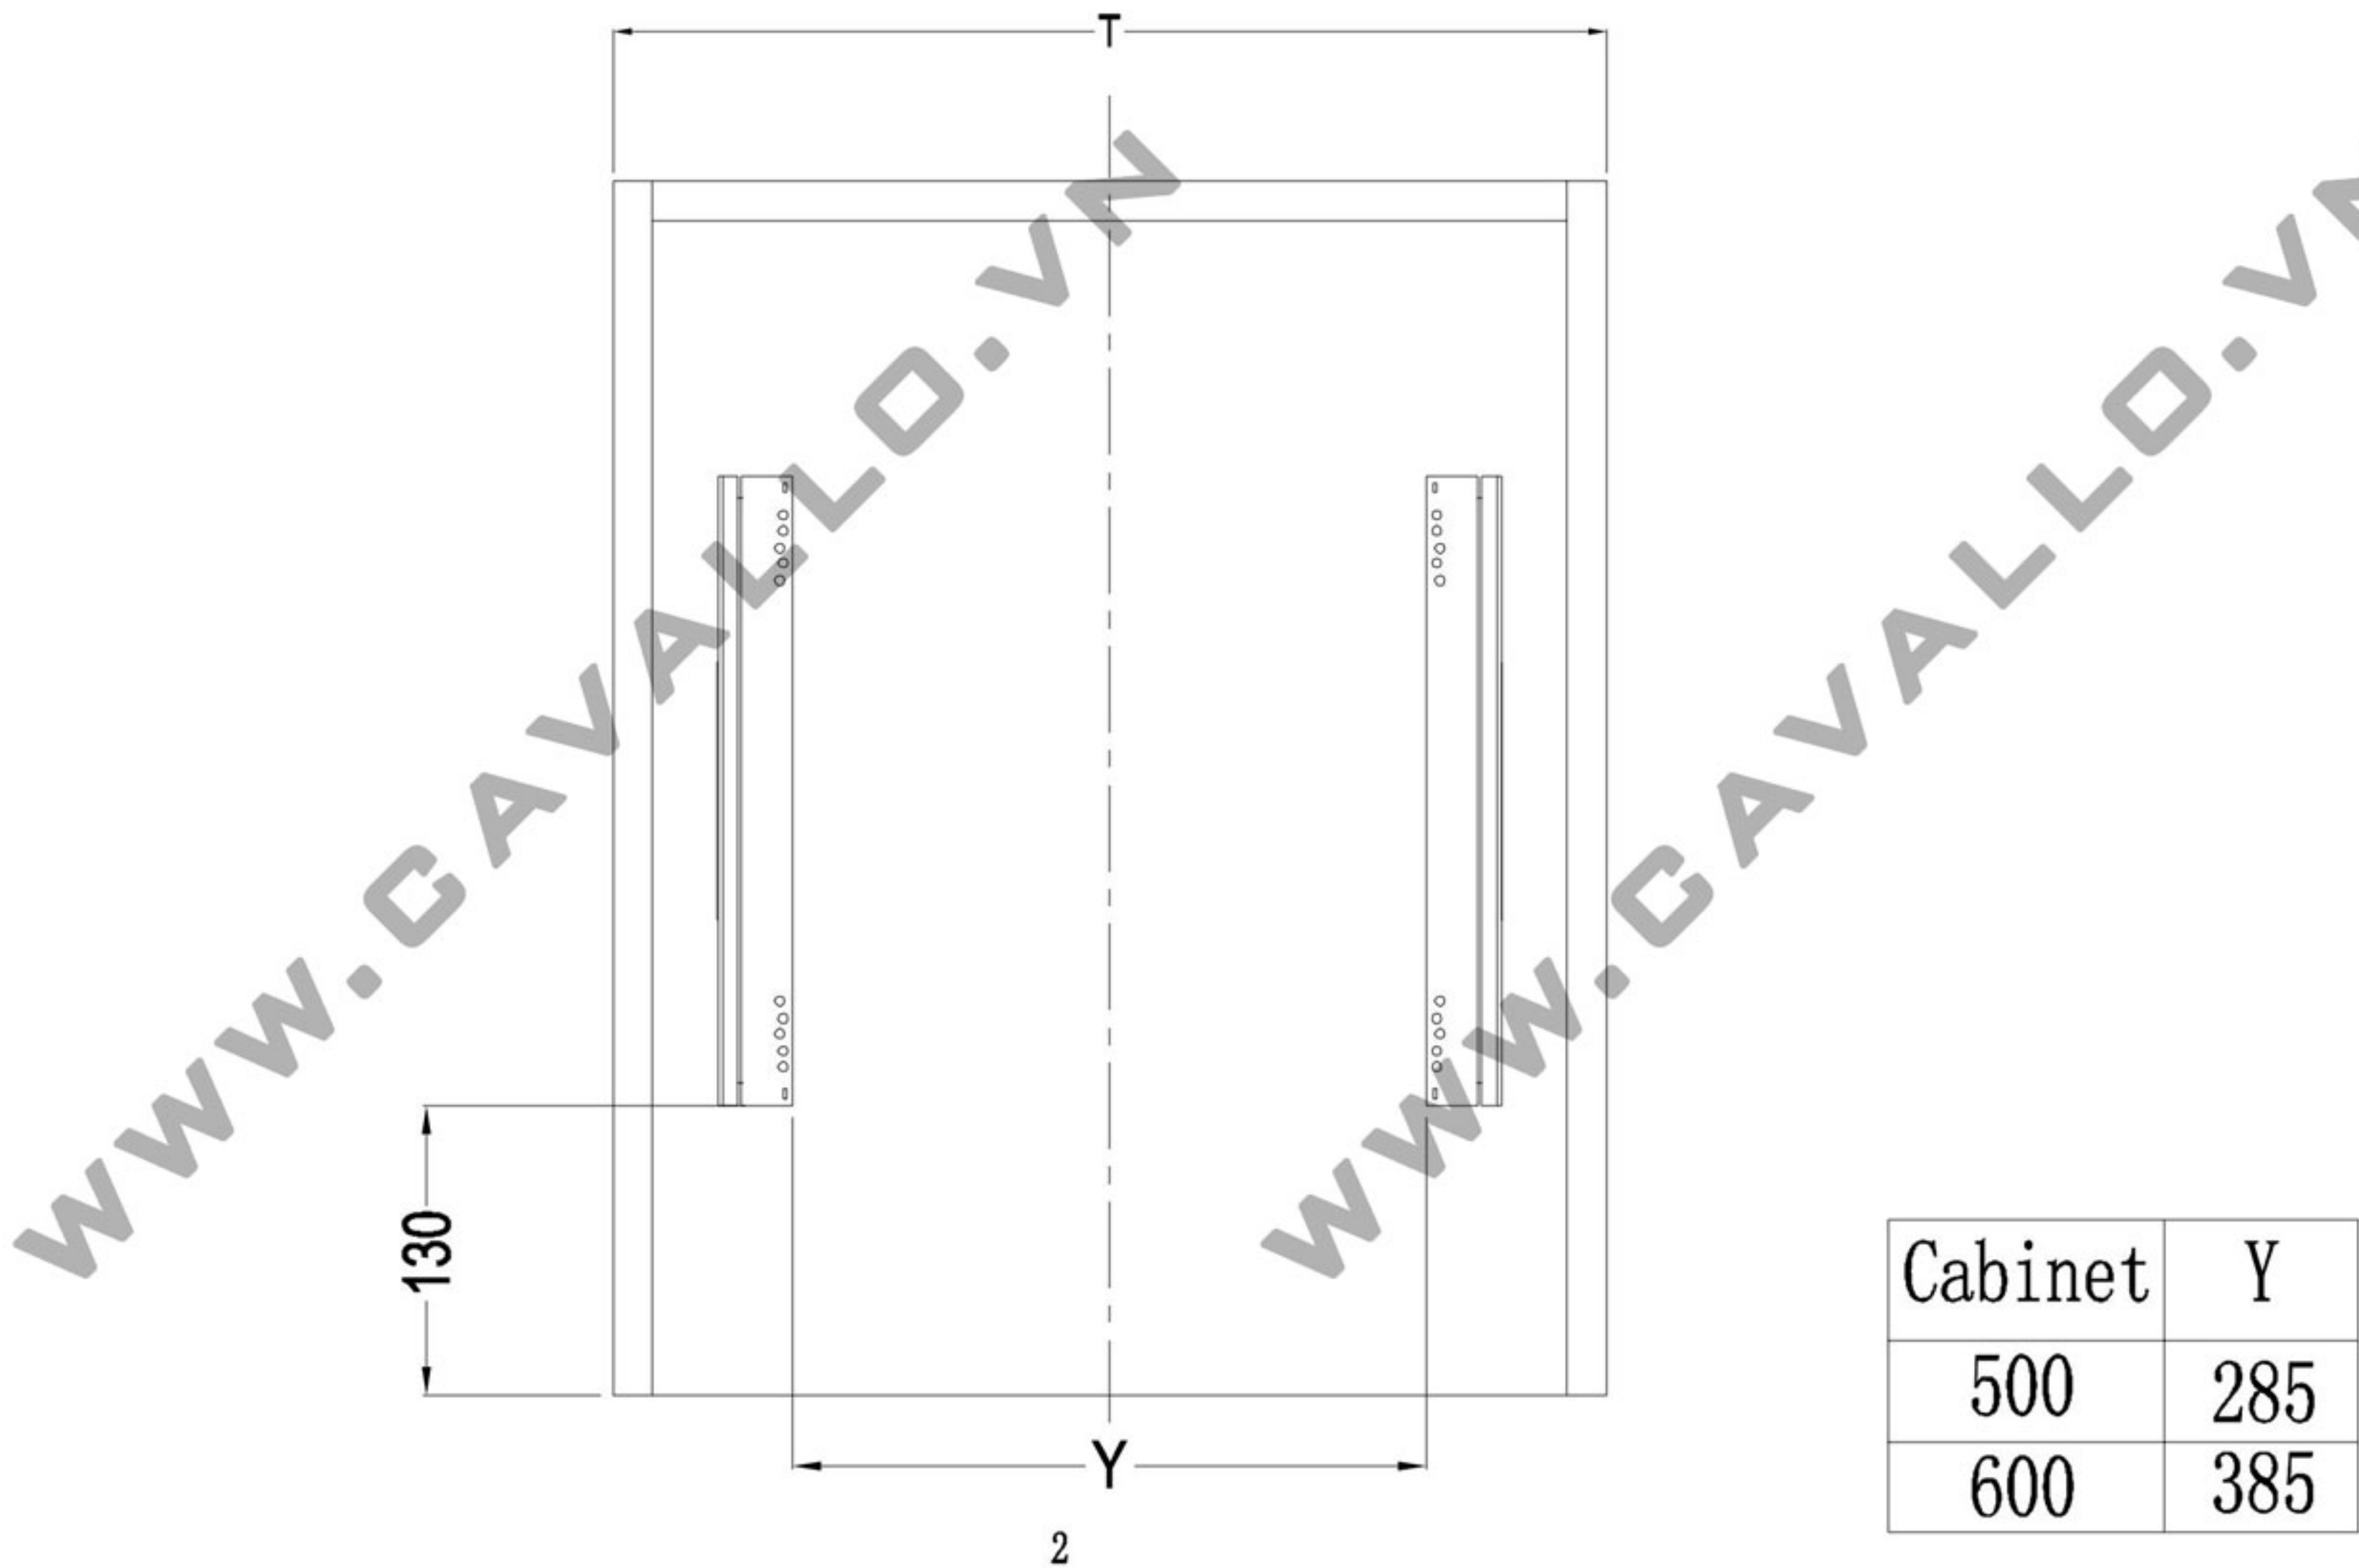

Step 3: Install L-shaped iron.

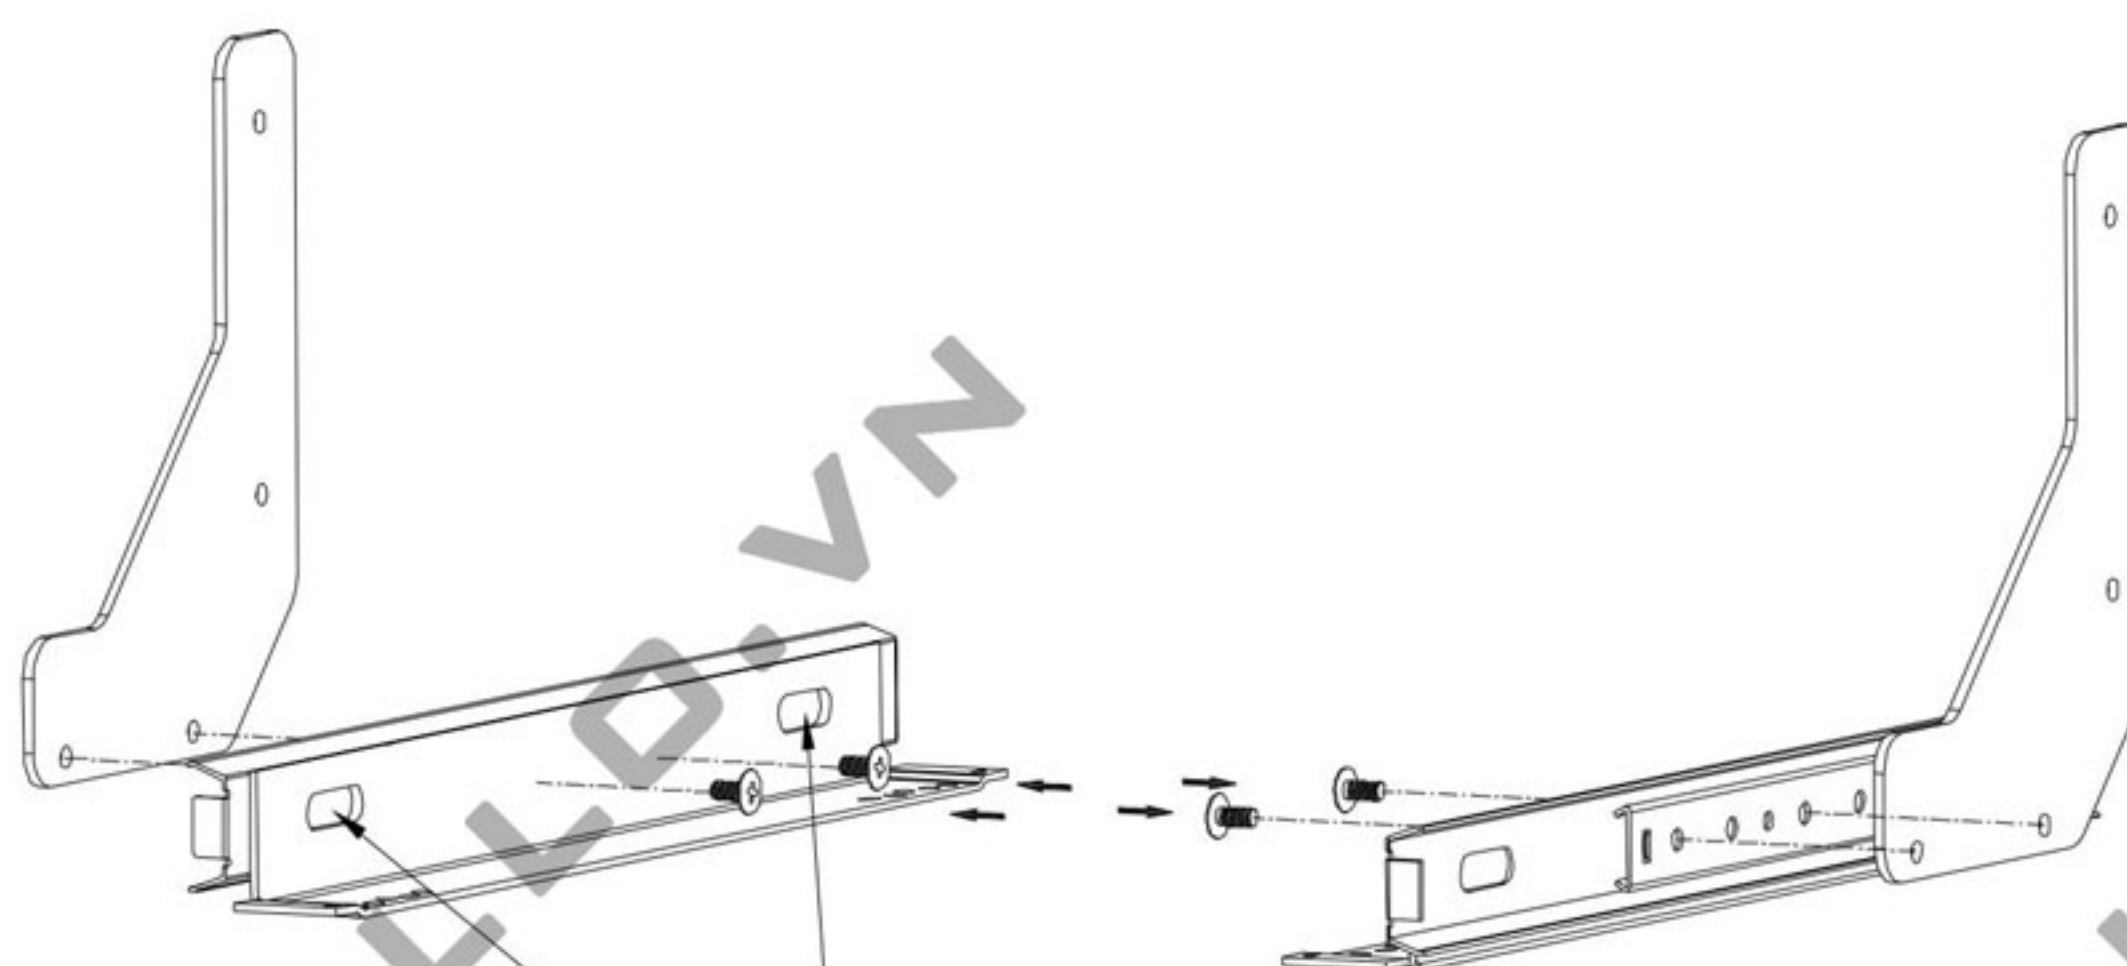


Tighten the screw through the hole


Step 4: Install slip frame.

A: Screw the loaded screws out of the slip frame, attach L-shaped bracket with castors into the frame tube as illustrated in the picture and screw up the screws but it is not necessary to tighten them.


B: Fix the frame installed in step A to the L-shaped iron sheets with 4 screws M6*25.

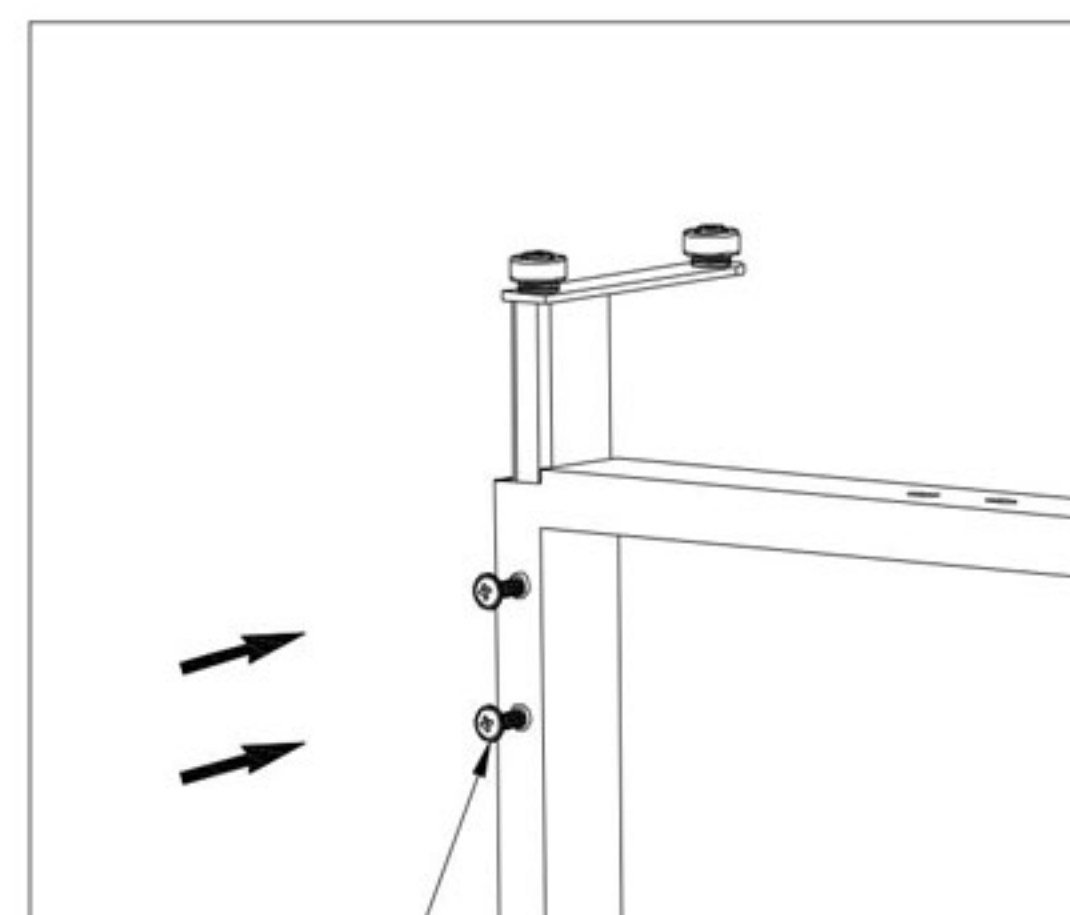


Loosen the screw

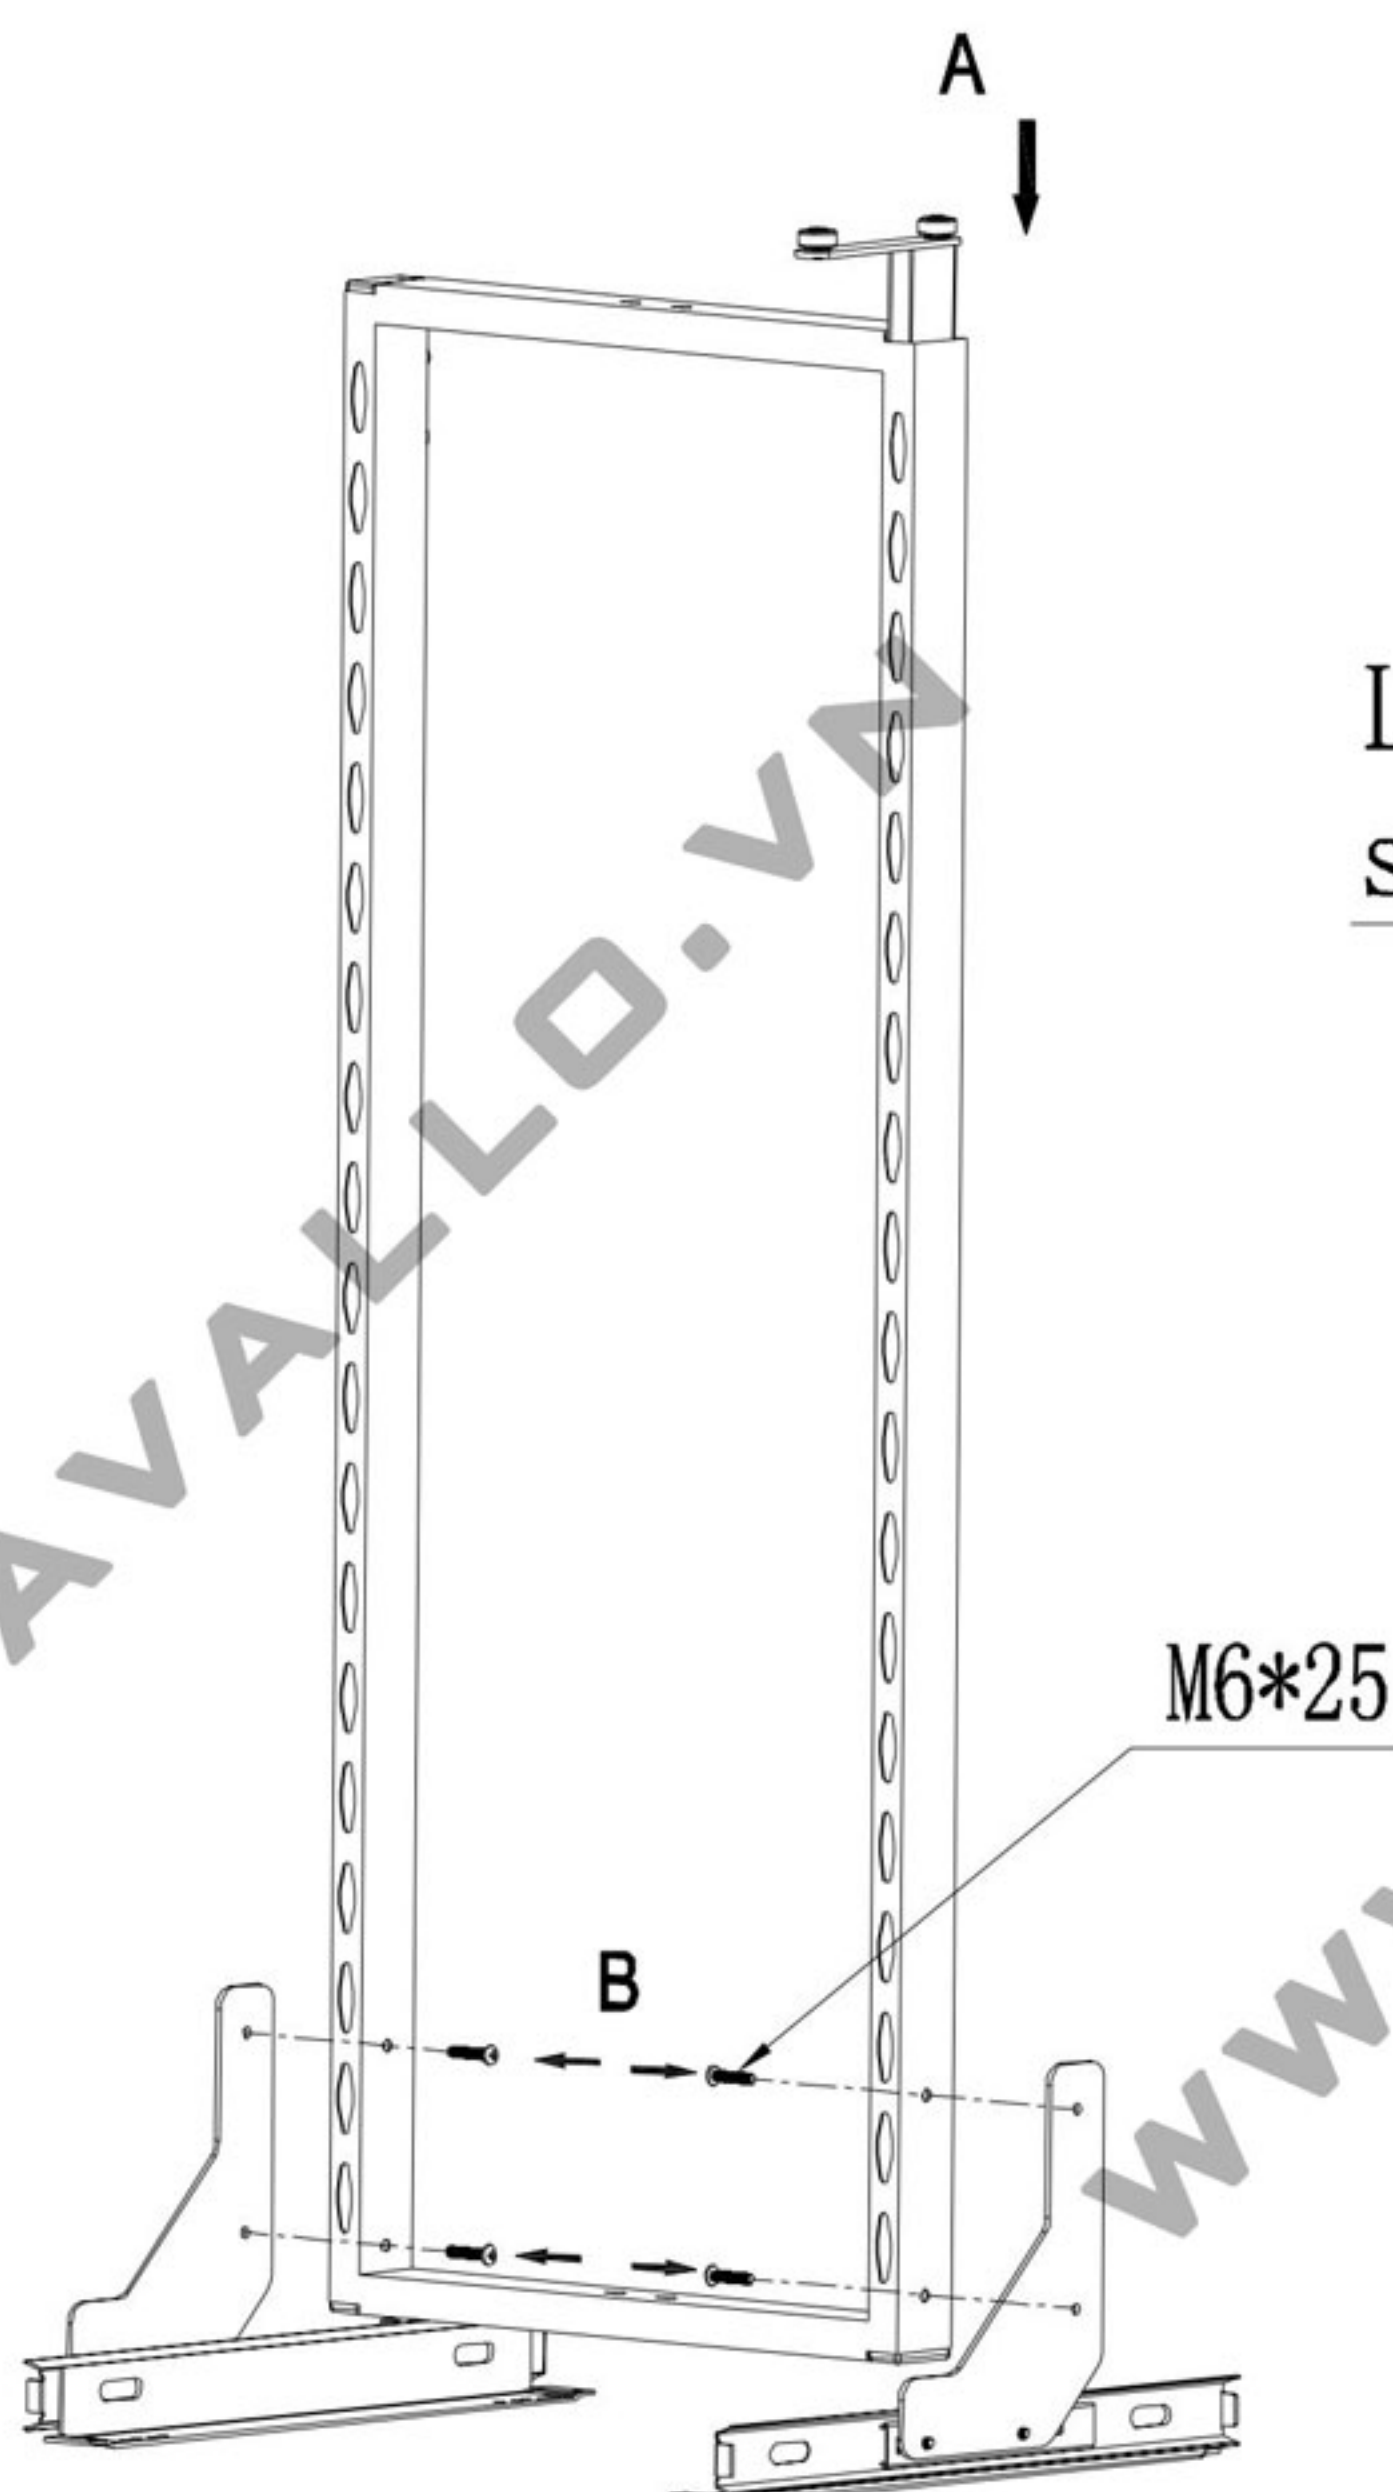

Step 5: Fix the runners onto the bottom frame panel with 8pcs tapping screws ST3.5*16.

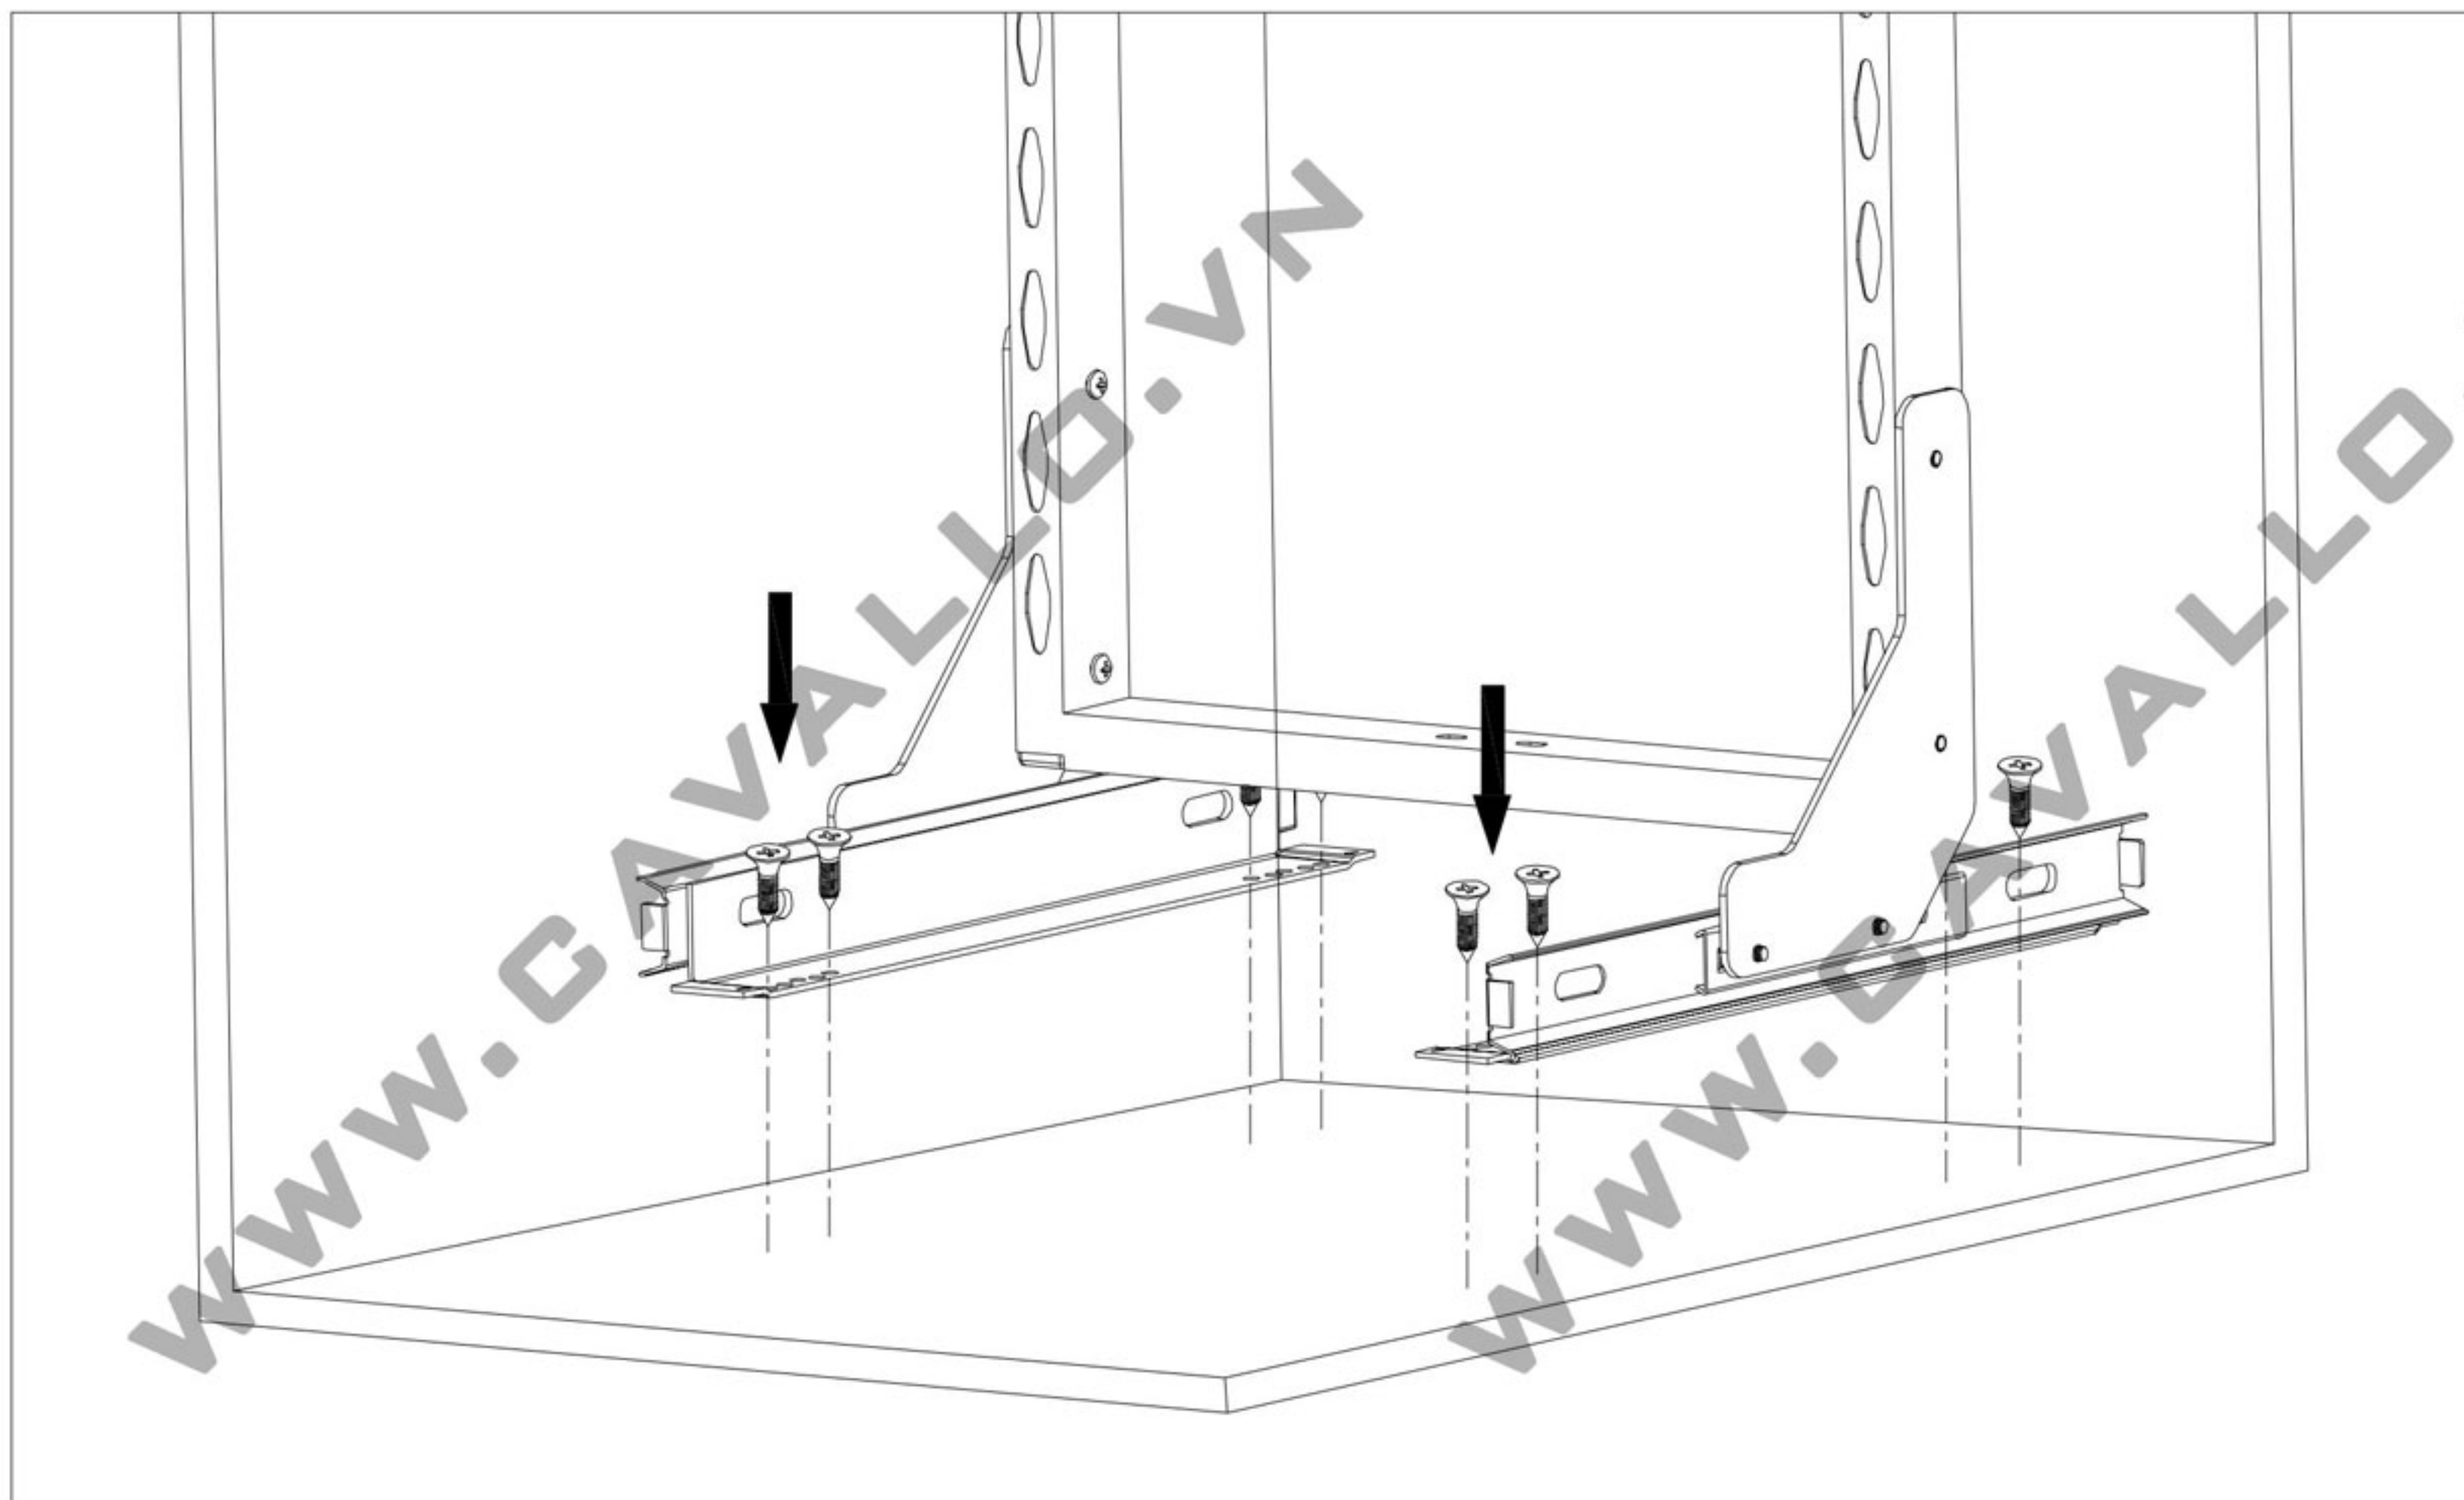


Step 6: Fix the U-iron onto the top cabinet panel with 4 tapping screws ST3.5*12.

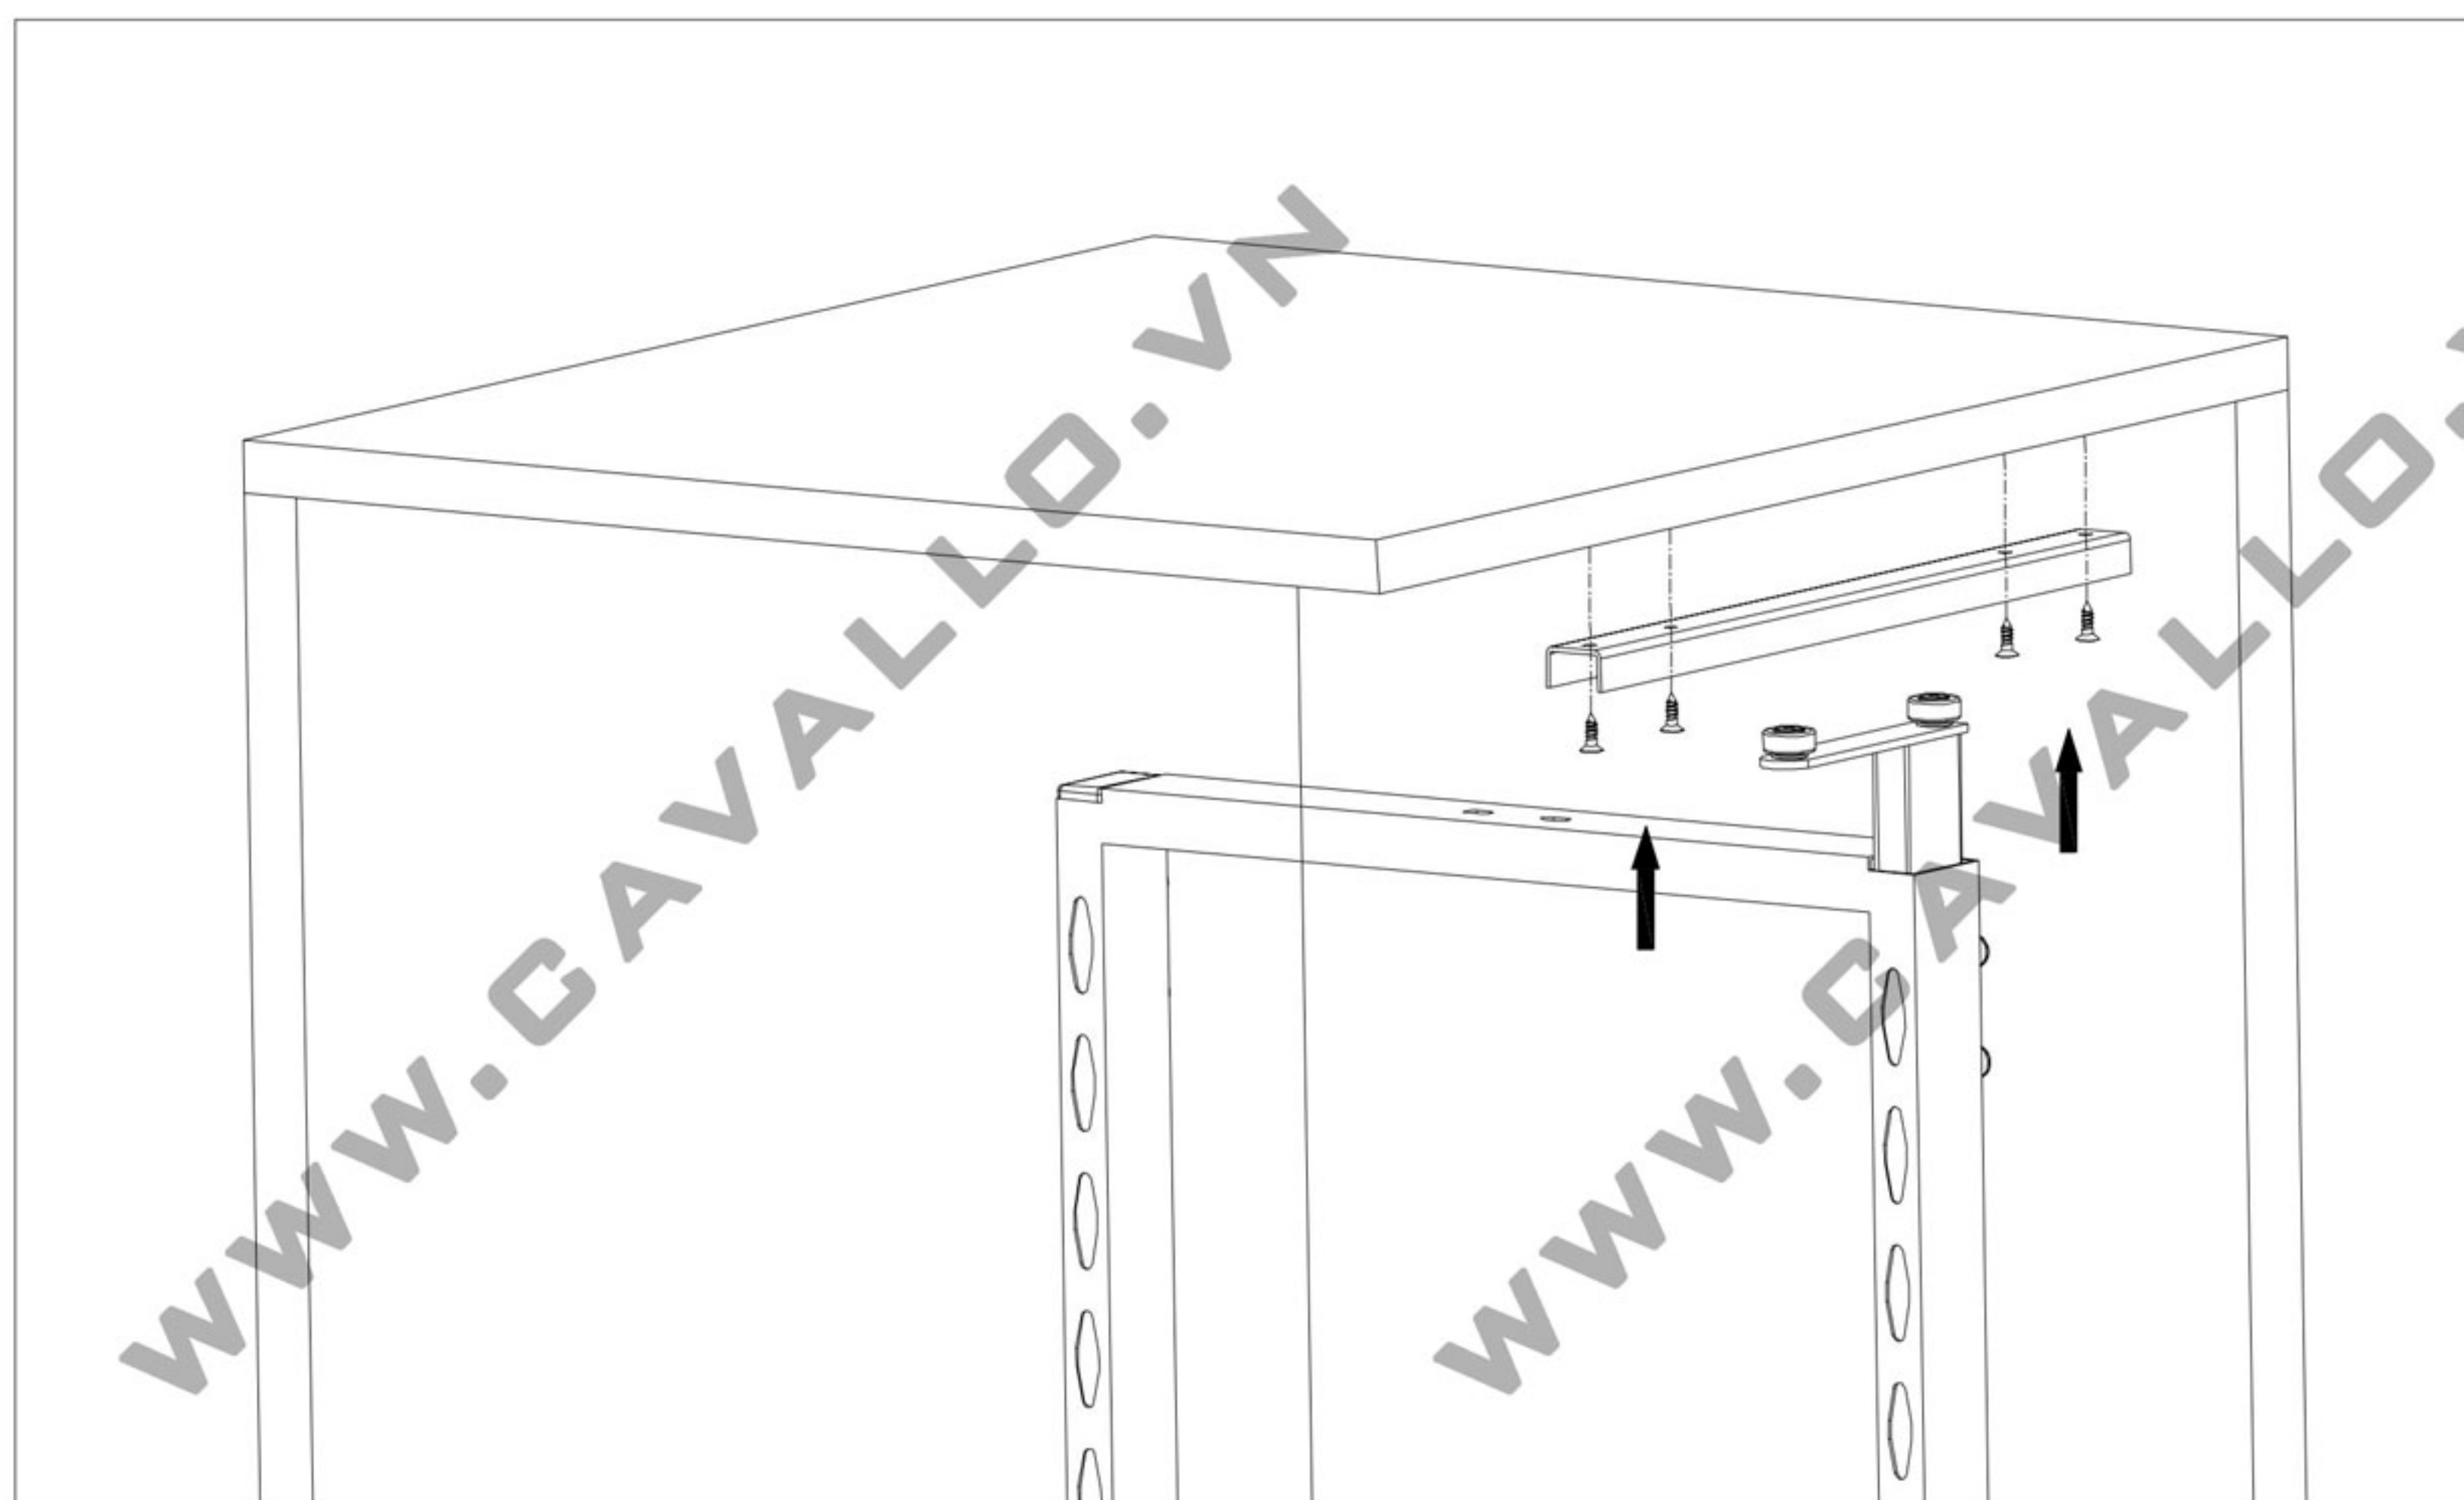


Step 7: Adjust the L-shaped bracket with castors, make sure the castors are put into the U-shaped slot completely and tighten the screws with a screw reamer.


Loosen the screw, then tighten the screws.

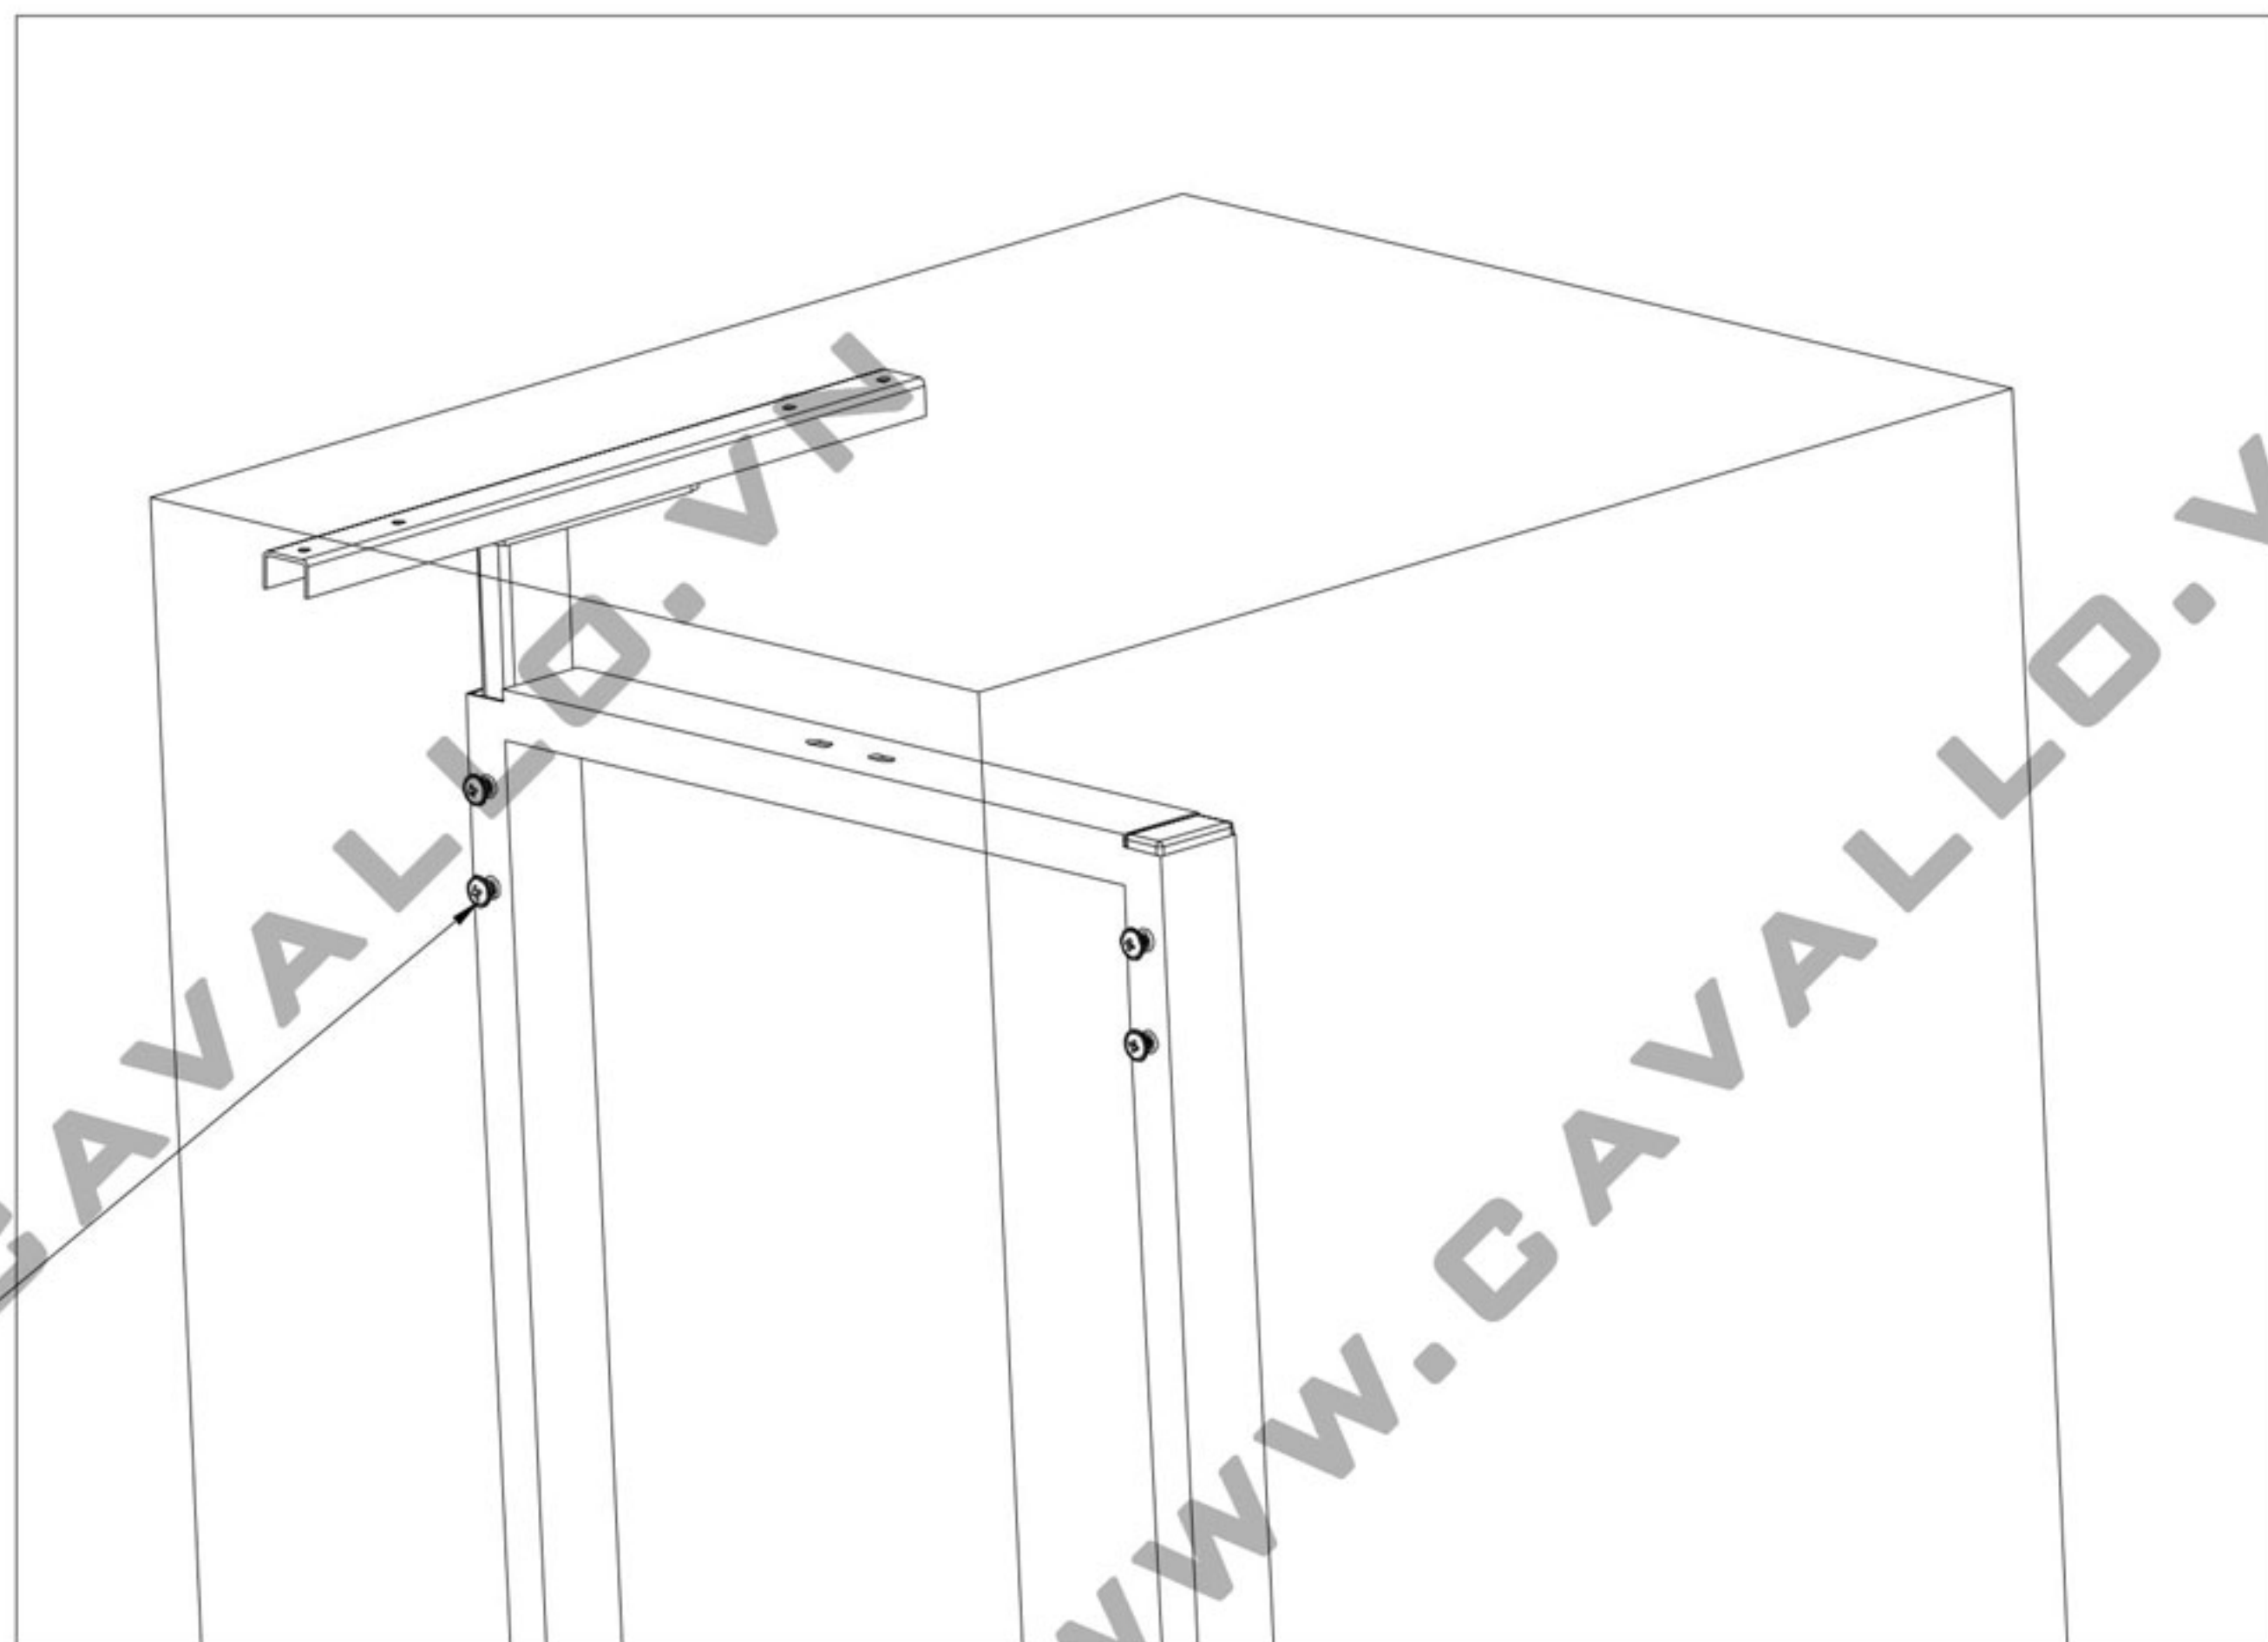

Step 8: Install the runner protective cover.

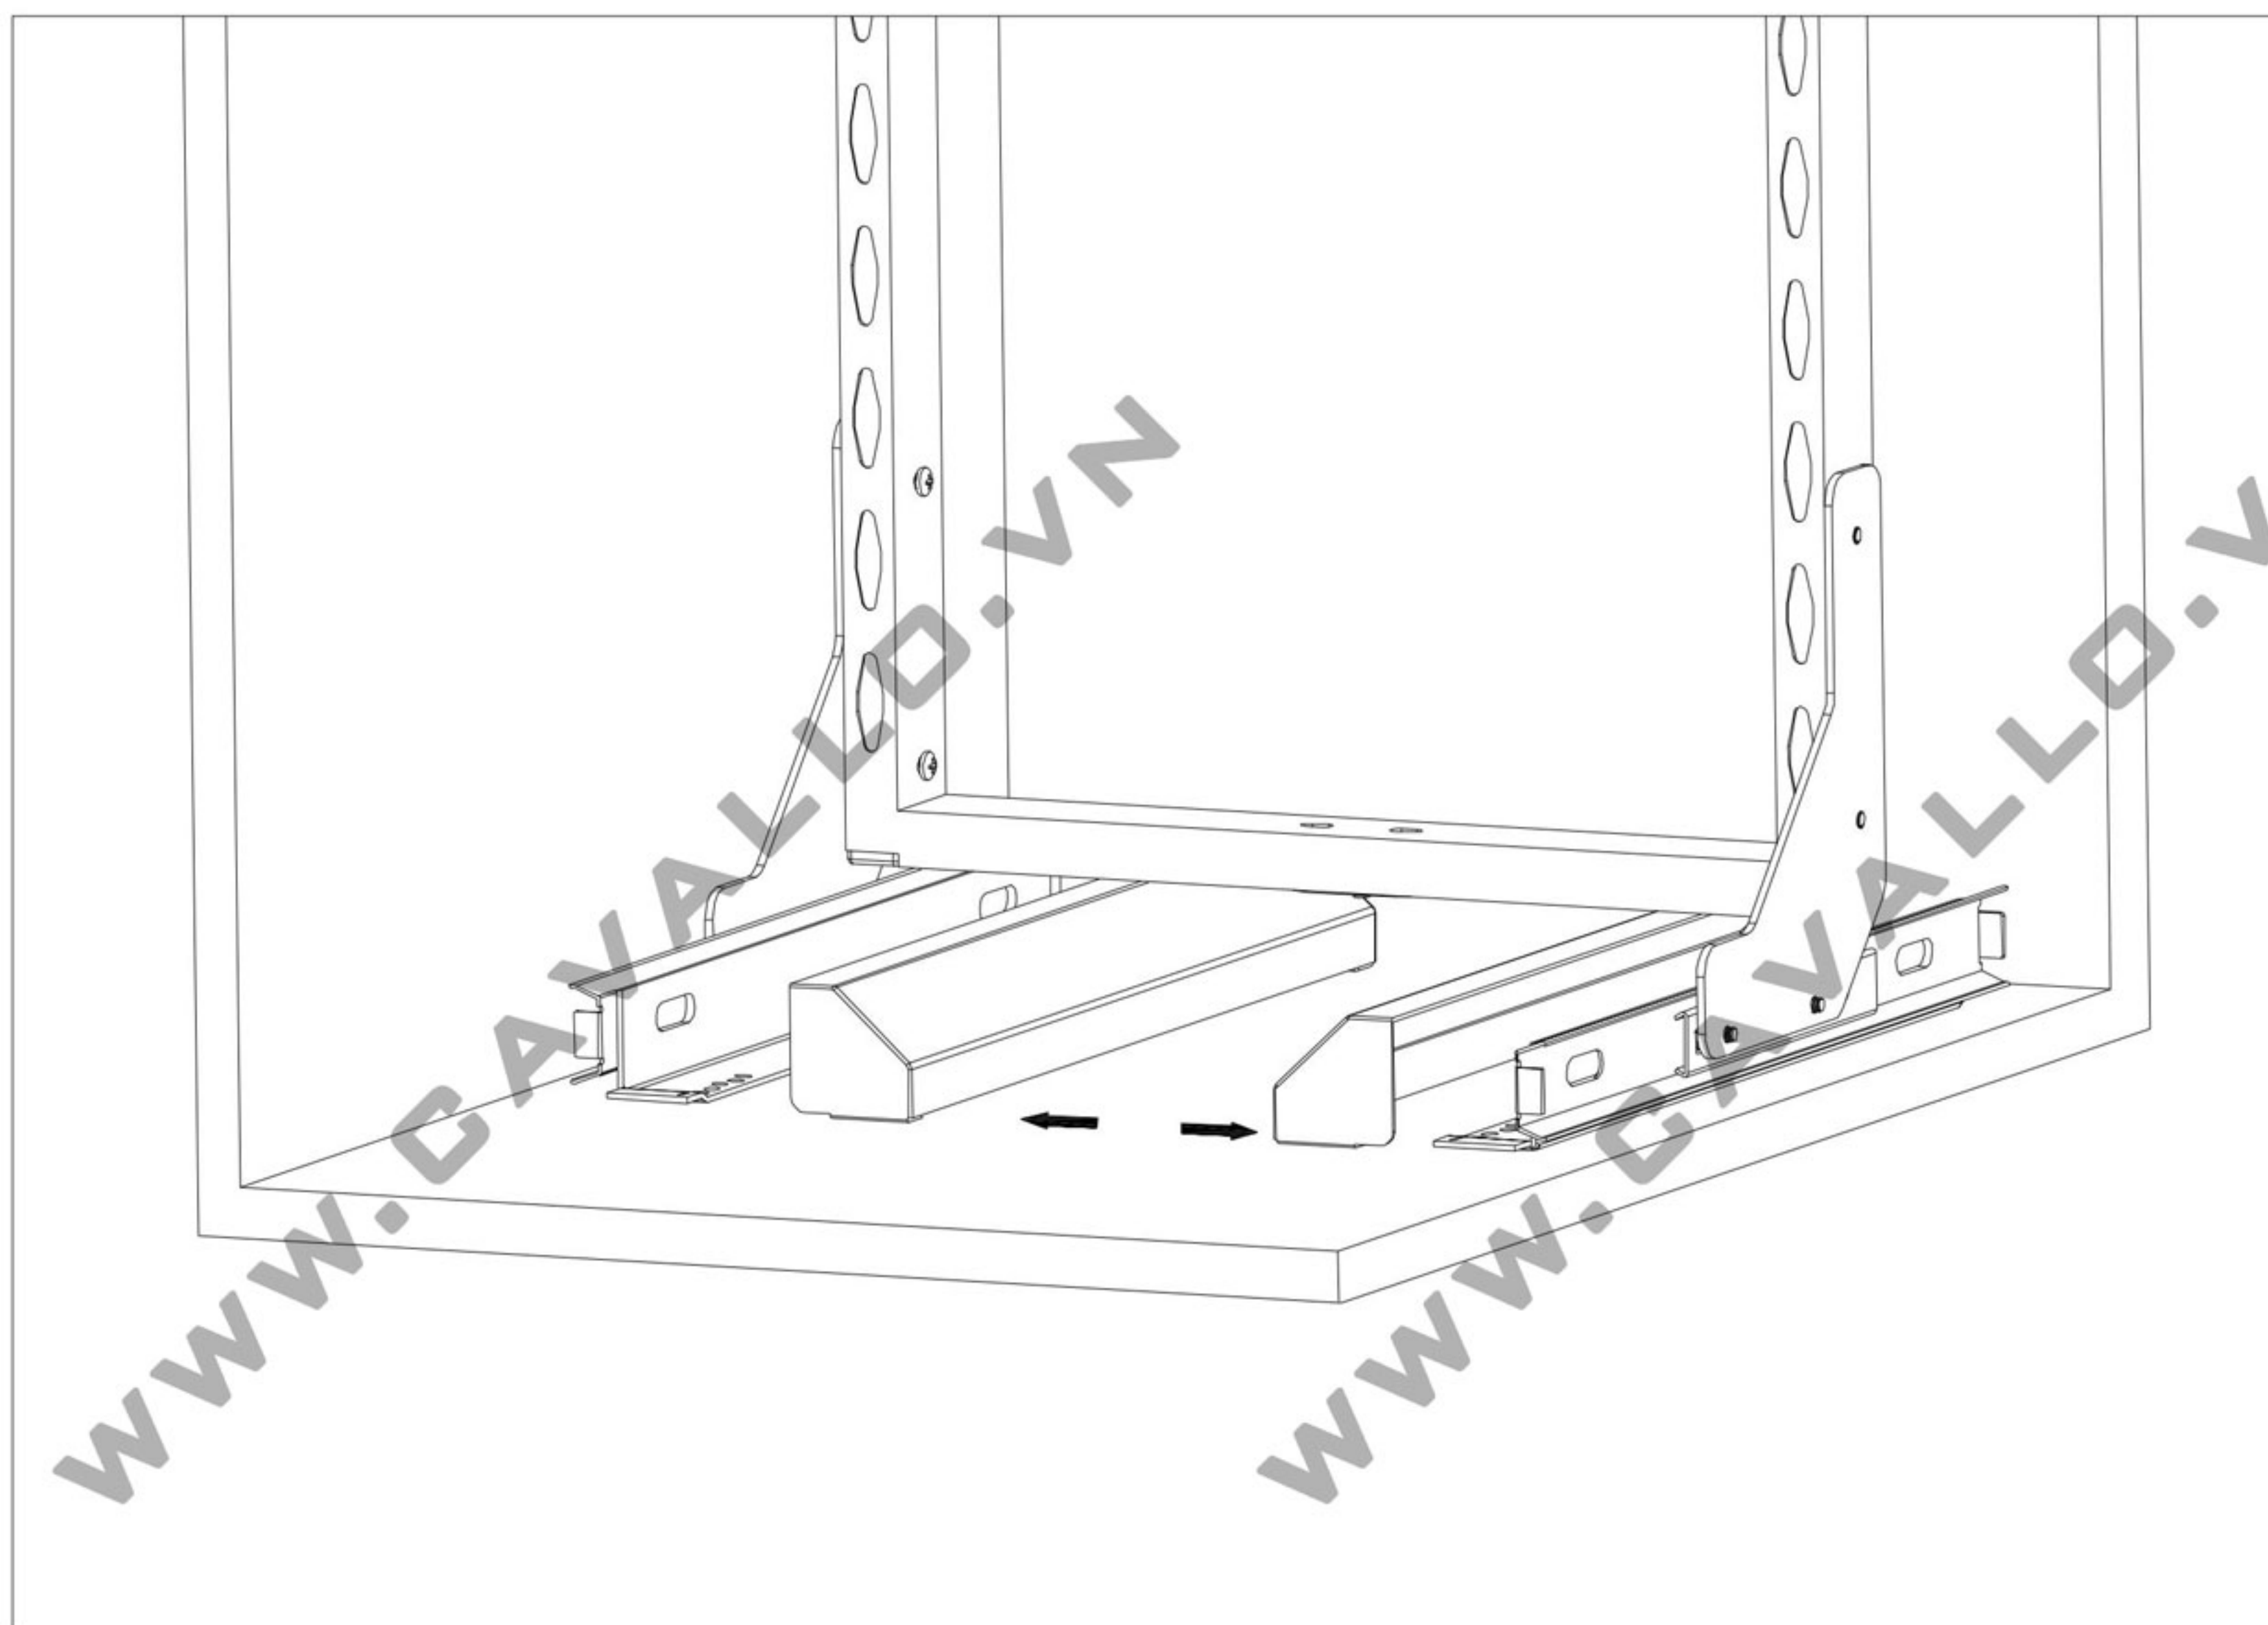


Step 9: Install panel hangstrip.

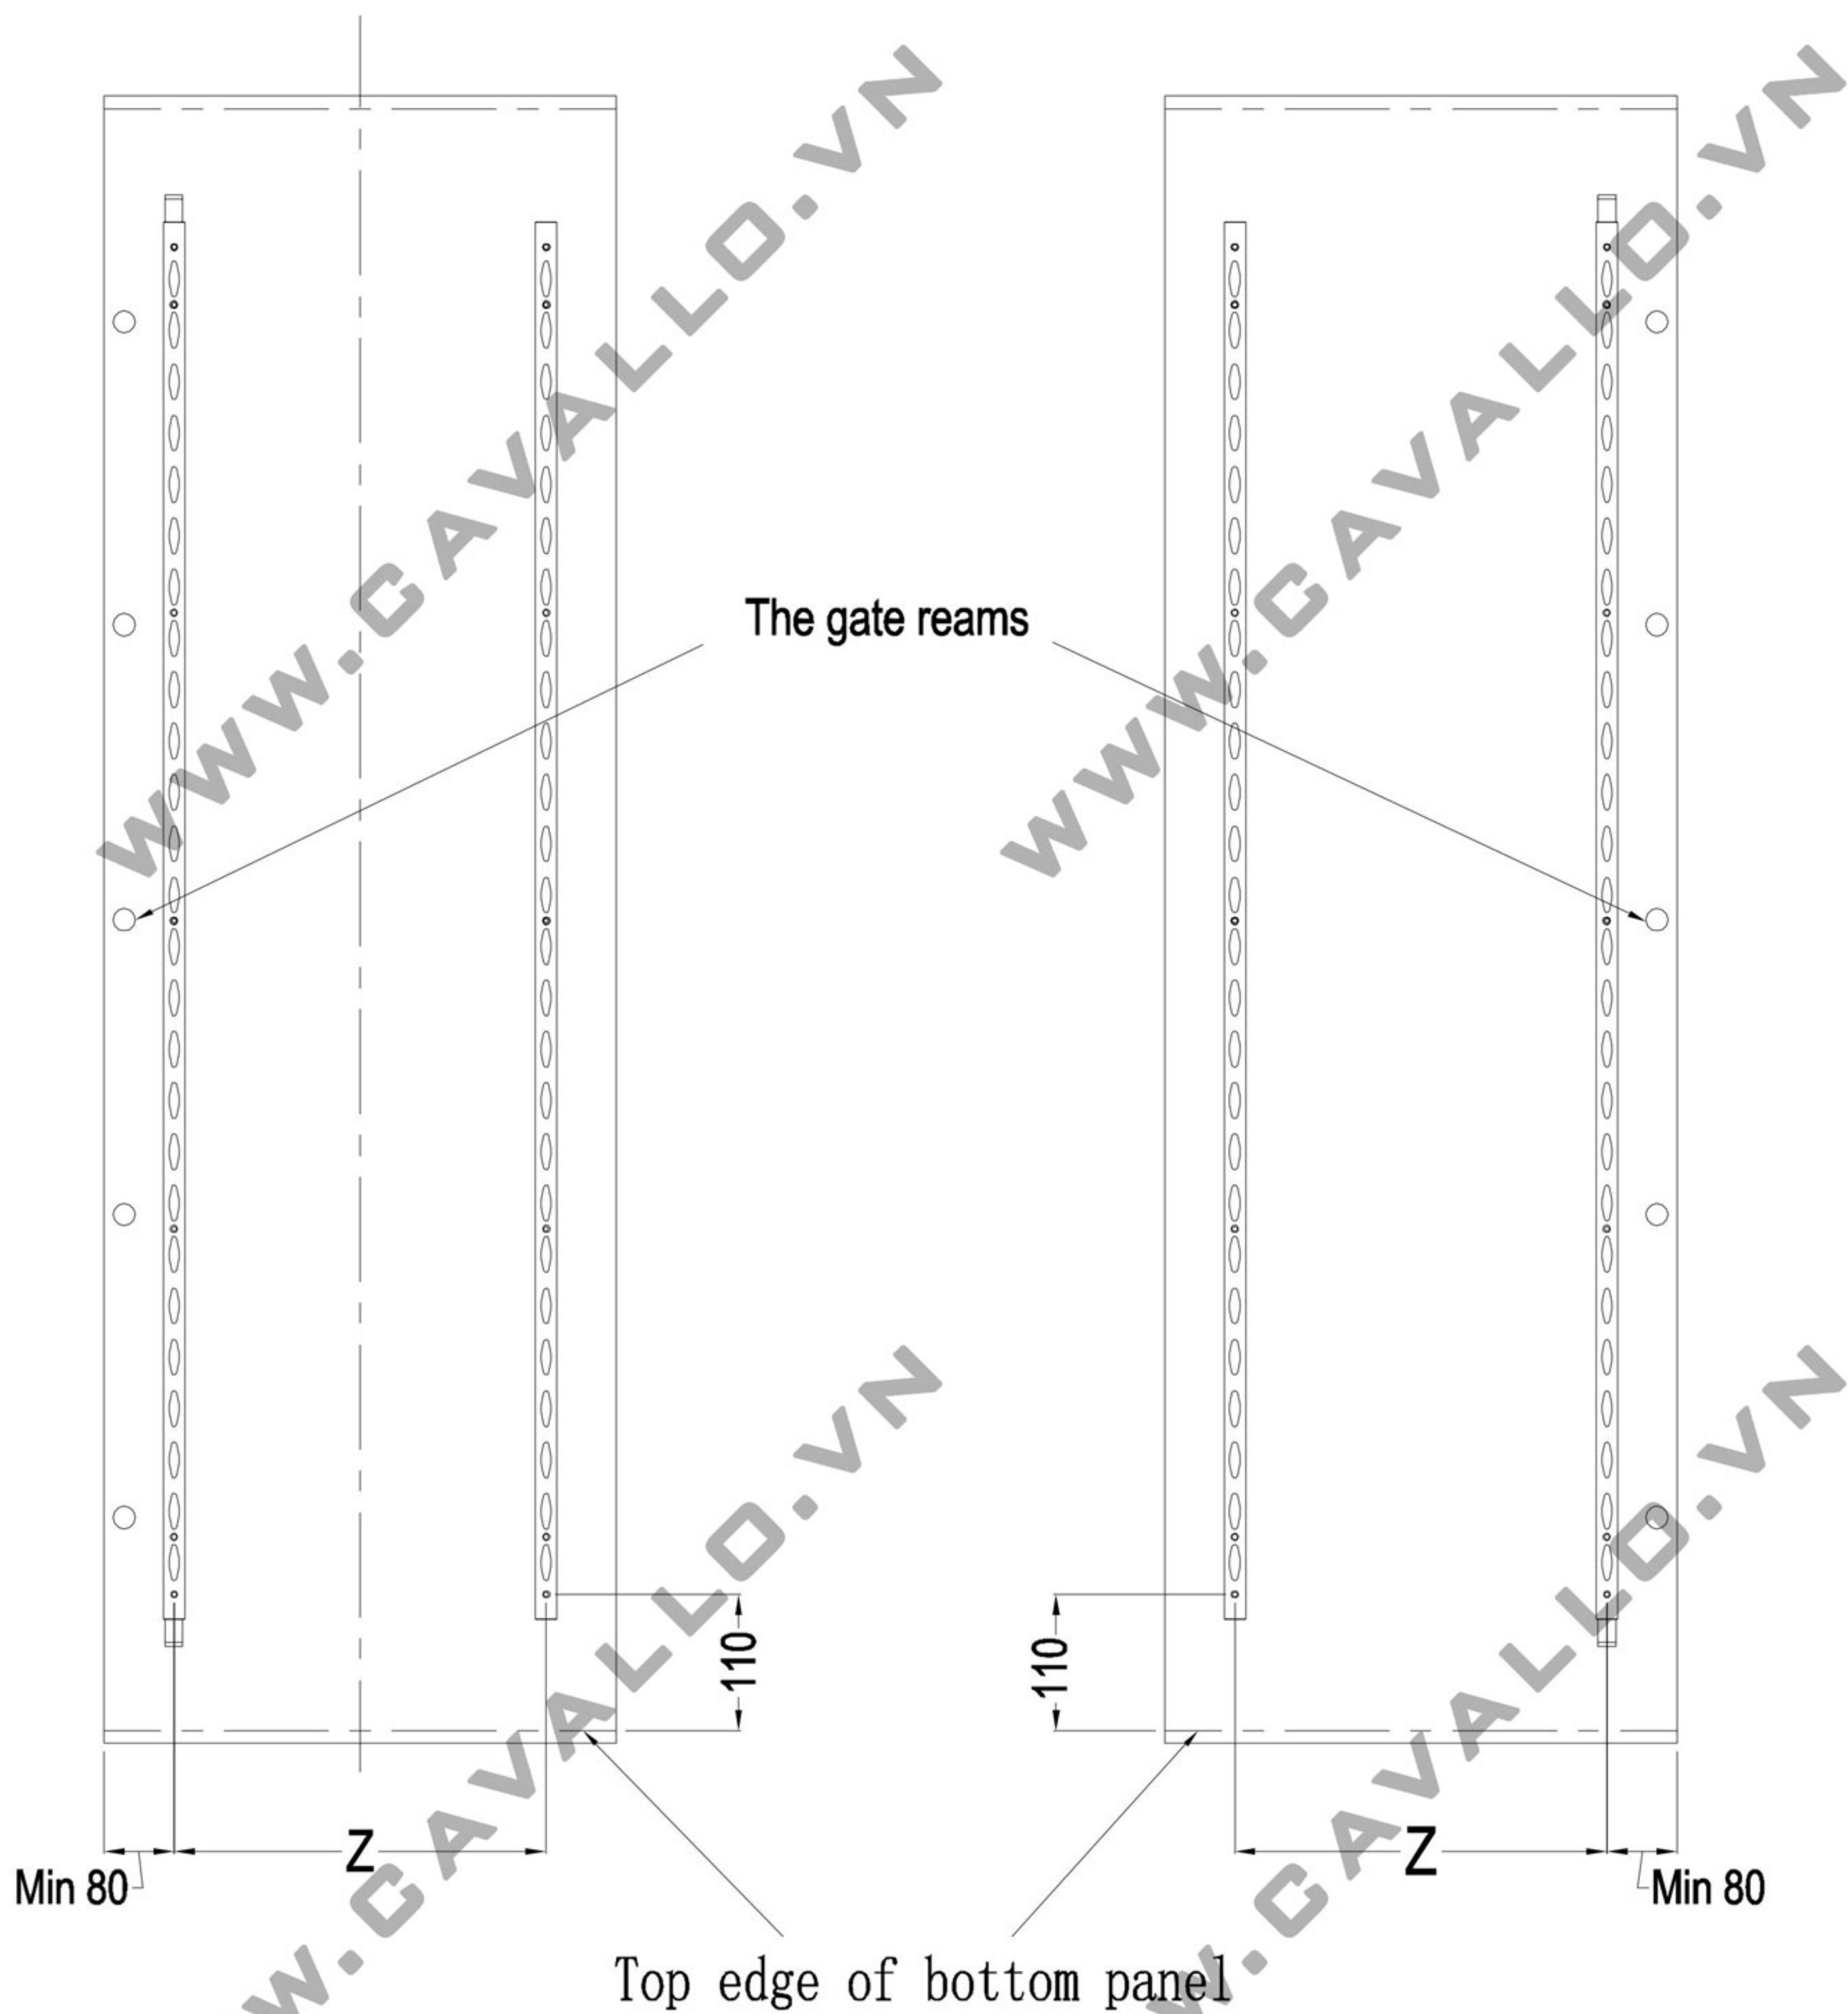

Cabinet	Z
500	315
600	415

Step 10: Screw the screws out of the connecting strip, as the sequence revealed in the picture, connect the slip frame and the top of the panel hangstrip with the connecting strip (attention: the connecting strip has the differentiation from left and right), and tighten the screws.

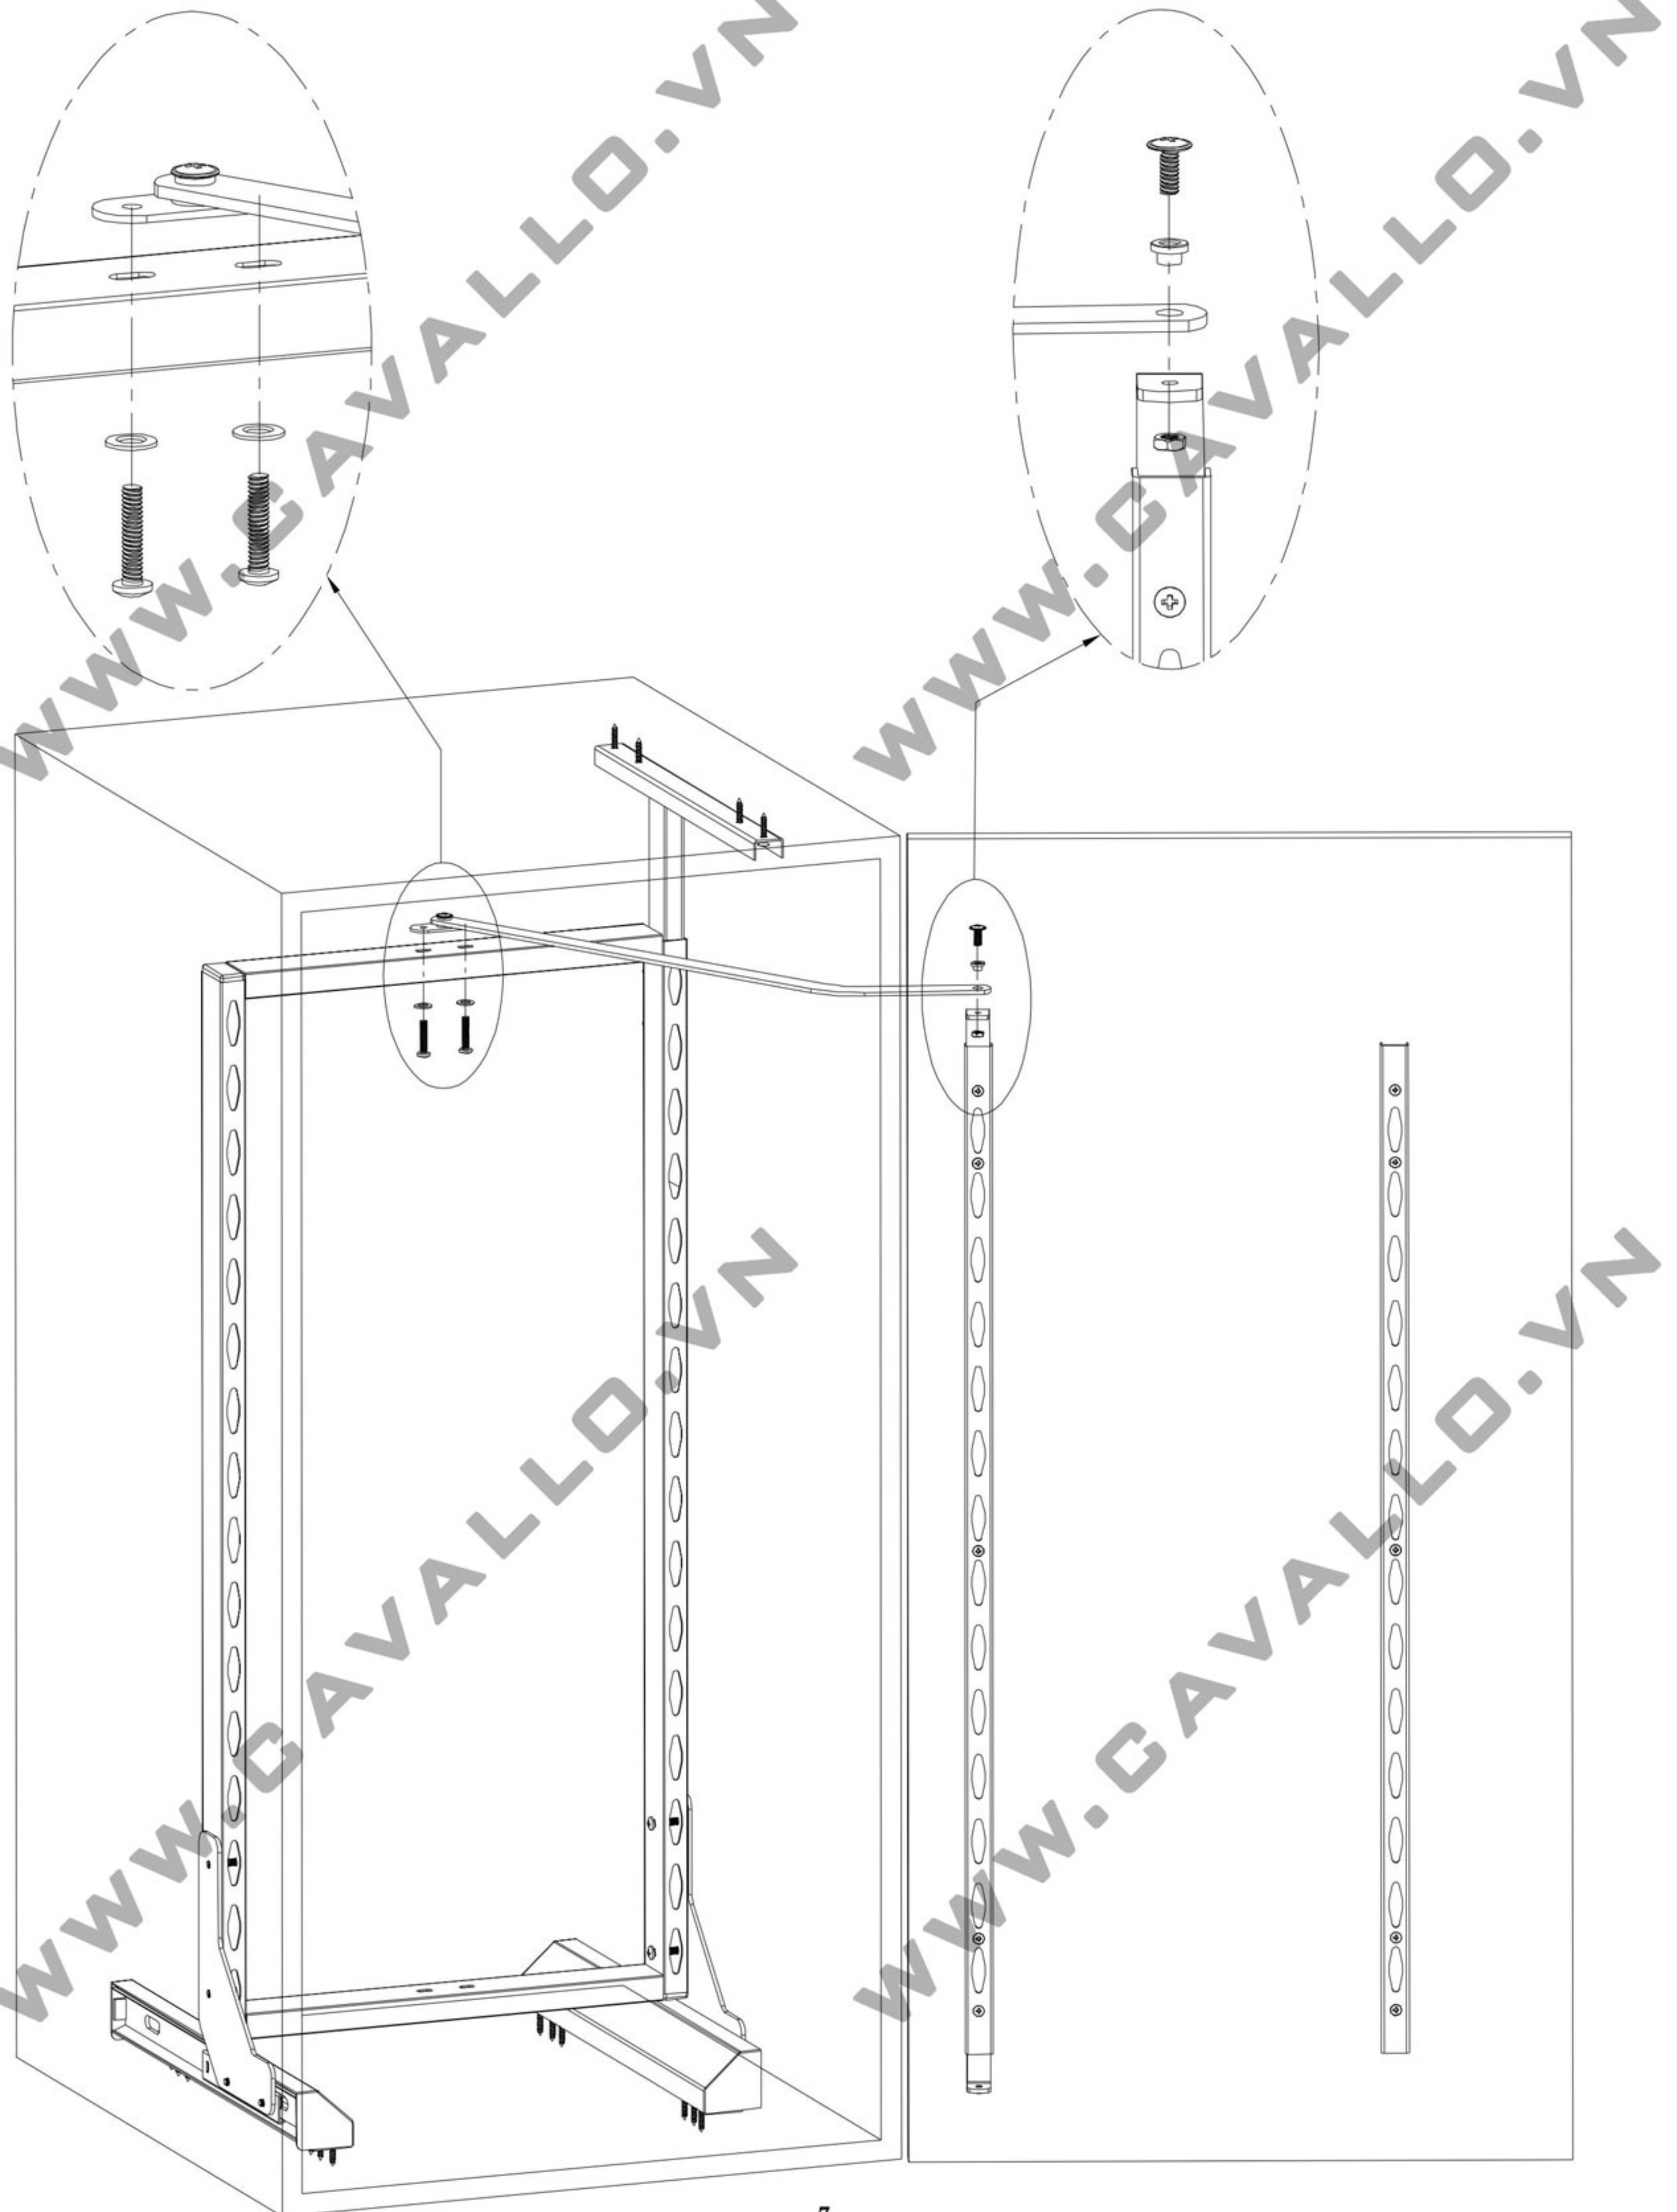

Step 11: Screw the screws out of the connecting strip, as the sequence revealed in the picture, connect the slip frame and the bottom of the panel hangstrip with the connecting strip (attention: the connecting strip has the differentiation from left and right), and tighten the screws.

